


# OPERATING AND SERVICE MANUAL

## 8481A 8482A 8483A POWER SENSOR

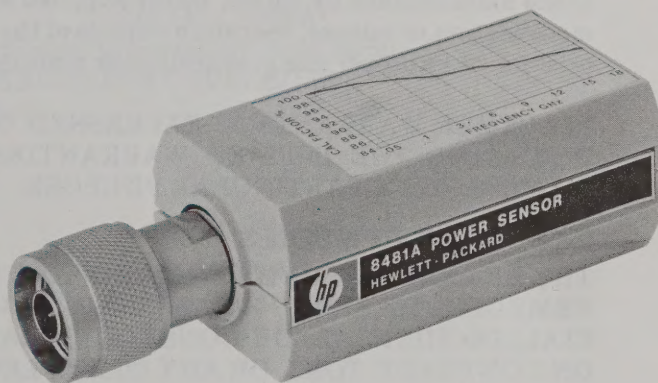

 **HEWLETT  
PACKARD**

## **CERTIFICATION**

*Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.*

## **WARRANTY**

This Hewlett-Packard instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

### **LIMITATION OF WARRANTY**

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

### **EXCLUSIVE REMEDIES**

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

## **ASSISTANCE**

*Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.*

*For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.*



**8481A  
8482A  
8483A**

**POWER SENSOR**

**SERIAL NUMBERS**

This manual applies directly to instruments with  
serial numbers prefixed:

8481A: 1926A

8482A: 1925A

8483A: 1925A

With the changes in the Appendix this manual also  
applies to instruments with serial numbers prefixed:

8481A: 1550A

8482A: 1551A

8483A: 1602A

For additional important information about serial  
numbers, see INSTRUMENTS COVERED BY  
MANUAL on page 2.



**HEWLETT  
PACKARD**

©

HEWLETT-PACKARD COMPANY

1975, 1979

1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.

MANUAL PART NUMBER 08481-90063

Microfiche Part Number 08481-90064

Printed: OCTOBER 1980



## 1. GENERAL INFORMATION

2. This Operating and Service Manual contains information about initial inspection, performance tests, adjustments, operation, troubleshooting and repair of the Model 8481A, 8482A, and 8483A Power Sensors.

3. On the title page of this manual is a "Microfiche" part number. This number can be used to order a 4 x 6-inch microfilm transparency of the manual.

## 4. Instruments Covered by Manual

5. This instrument has a two-part serial number. The first four digits and the letter comprise the serial number prefix. The last five digits form a sequential suffix which is unique to each instrument. The contents of this manual apply directly to instruments having the serial number prefix listed under SERIAL NUMBERS on the title page.

6. An instrument manufactured after the printing of this manual may have a serial prefix that is not listed on the title page. This unlisted serial prefix indicates that the manual for this instrument is supplied with a yellow Manual Changes supplement that documents the differences.

7. In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement is keyed to the manual print date and part number, both of which appear on the title page. Complimentary copies of the supplement are available on request from your nearest Hewlett-Packard office.

8. For information concerning a serial number prefix not listed on the title page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

## 9. Description

10. The Power Sensors are used for measuring the average power supplied by an RF source. In use, the Power Sensor is connected to the RF source and to a compatible power meter. (Suitable meters are the HP 435 series or 436A Power Meter.) The 8481A and 8482A Power Sensors place a 50-ohm load on the RF source (8483A has a 75-ohm load). The power meter indicates the power dissipated in this load in  $\mu\text{W}$  (or mW) and dBm. The HP 436A Power Meter can also provide readings, in dB, relative to a previous RF input to the Power Sensor.

11. The Power Sensors measure power levels from  $-30$  dBm to  $+20$  dBm ( $1 \mu\text{W}$  to  $100 \text{ mW}$ ), at frequencies from  $10 \text{ MHz}$  to  $18 \text{ GHz}$  (8481A), or  $100 \text{ kHz}$  to  $4.2 \text{ GHz}$  (8482A), or  $100 \text{ kHz}$  to  $2 \text{ GHz}$  (8483A).

12. The physical configuration of all sensors is the same. However, because of the different frequency ranges covered, there are some changes in part numbers and component values.

13. CAL FACTOR data is provided on a label attached to the Power Sensor's cover. Maximum uncertainties of the CAL FACTOR data are listed in Table 1.

14. Specifications for the Power Sensor are provided in Table 2.

## 15. Option 001 (8481 only)

16. A precision 7 mm RF connector (APC-7) is substituted for the type-N connector.

## 17. Accessories Supplied

18. The Model 8483A is supplied with an adapter (HP 1250-0597, shown in Figure 1) for joining the Power Sensor's 75-ohm Type N connector to the 50-ohm power reference connector on the power meter. This accessory is a mechanical adapter only, not an impedance transformer. Therefore, an impedance mismatch exists and the meter should be calibrated to 96% of the power reference level at 50 ohms (e.g.,  $0.96 \text{ mW}$  for the HP Model 435 series).

### CAUTION

*Remove mechanical adapter from the Power Sensor before connecting the sensor to a 75-ohm source.*

## 19. Recommended Test Equipment

20. Table 3 lists the test equipment recommended to check, adjust, and troubleshoot the Power Sensor. If substitute equipment is used, it must meet or exceed the critical specifications.

## 21. INSTALLATION

### 22. Initial Inspection

23. Inspect the shipping container. If the container or packing material is damaged, it should be kept until the contents of the shipment have been checked mechanically and electrically. If there is mechanical damage or if the instrument does not pass the performance tests, notify the nearest Hewlett-Packard office. Keep the damaged shipping materials (if any) for inspection by the carrier and a Hewlett-Packard representative.



## POWER SENSOR

### MANUAL IDENTIFICATION

Model Number: 8481/82/83A

Date Printed: October 1980

Part Number: 08481-90063

This supplement contains important information for correcting manual errors and for adapting the manual to instruments containing improvements made after the printing of the manual.

To use this supplement:

Make all ERRATA corrections

Make all appropriate serial number related changes indicated in the tables below.

8481A		8482A	
Serial Prefix or Number	Make Manual Changes	Serial Prefix or Number	Make Manual Changes
2237A ▶ 2349A	1 1 and 3	2237A ▶ 2349A	1 1 and 3

▶ NEW ITEM

8483A	
Serial Prefix or Number	Make Manual Changes
2243A 2329A	1 1, 2
▶ 2351A	1-3

### ERRATA

▶ Page 5, paragraph 36:

After Step b. add the following:

- c. For the HP 438A Power Meter the following procedure will automatically calibrate the Power Meter and Power Sensor to 1 mW:
  - Press CAL ADJ
  - Enter the reference CAL FACTOR value
  - Press ENTER

Page 9, Table 6-3:

**A2C1 (8482A ONLY)** Change the part number for A2C1 to 0180-2781 CD0.

**A2C1 (8483A ONLY)** Change the part number for A2C1 to 0180-3210 CD2.

**MP6.** The recommended replacement for MP6, if it fails, is found in **CHANGE 1**.

**MP29 (8483A Only).** Add the following below MP28:

MP29 08483-00002 CD7 LABEL-CAL INSTRUCTIONS.

▶ Page 13, Disassembly Procedure Step a.

Change "small" to "large".

### NOTE

Manual change supplements are revised as often as necessary to keep manuals as current and accurate as possible. Hewlett-Packard recommends that you periodically request the latest edition of this supplement. Free copies are available from all HP offices. When requesting copies quote the manual identification information from your supplement, or the model number and print date from the title page of the manual.

**CHANGE 1**

Page 11, Figure 4:

Delete the capacitors in the shaded area to the right of the A2 Input Amplifier Assembly. Add pin A (right side of schematic). Connect pin A to the junction of pins F, M and J. (see **CHANGE 3**).

Page 9, Table 6-3:

**MP6.** Change the part number for MP6 to 1460-1978 CD0 SPRING-CPRSN .088-IN-OD .188-IN-OA-LG.

**CHANGE 2 (8483A ONLY)**

Page 9, Table 6-3:

**MP29.** Change the part number and description of MP29 to the following:

MP29 08483-00006 CD1 LABEL-CAL INSTRUCTIONS.

**► CHANGE 3**

Page 11, Figure 4:

In the shaded area (right side of schematic) remove the line connecting pin A to pins F, M and J.



Table 1. Uncertainty of Calibration Factor Data<sup>3</sup>

8481A					
Frequency (MHz)	Sum of Uncertainties $\pm(\%)^1$	Probable Uncertainties $\pm(\%)^2$	Frequency (GHz)	Sum of Uncertainties $\pm(\%)^1$	Probable Uncertainties $\pm(\%)^2$
10.0	2.5	1.3	1.0	2.7	1.4
30.0	2.6	1.4	2.0	2.7	1.4
100.0	3.1	1.6	4.0	2.8	1.5
300.0	3.1	1.6	6.0	2.8	1.5
			8.0	3.2	1.7
			10.0	3.6	1.9
			12.4	4.4	2.3
			14.0	4.8	2.6
			16.0	5.2	2.9
			18.0	5.8	3.2
8482A			8483A		
Frequency (MHz)	Sum of Uncertainties $\pm(\%)^1$	Probable Uncertainties $\pm(\%)^2$	Frequency (MHz)	Sum of Uncertainties $\pm(\%)^1$	Probable Uncertainties $\pm(\%)^2$
0.1	2.3	1.3	0.1	2.6	1.5
0.3	2.2	1.2	0.3	2.5	1.4
1.0	2.2	1.2	1.0	2.5	1.4
3.0	2.2	1.2	3.0	2.5	1.4
10.0	2.5	1.3	10.0	3.0	1.6
30.0	2.6	1.4	30.0	3.1	1.6
100.0	3.1	1.6	100.0	3.9	2.0
300.0	3.1	1.6	300.0	3.9	2.0
1000.0	2.7	1.4	1000.0	3.7	2.0
2000.0	2.7	1.4	2000.0	3.7	2.0
4000.0	2.8	1.5			
<sup>1</sup> Includes uncertainty of reference standard and transfer uncertainty. Directly traceable to NBS. <sup>2</sup> Square root of the sum of the individual uncertainties squared (RSS). <sup>3</sup> Uncertainties are for sensors with type N connectors. Values will be slightly less for sensors with APC-7 connectors.					

Table 2. Specifications

<b>Model 8481A</b> <b>Power Range:</b> -30 dBm to +20 dBm (1 $\mu$ W - 100 mW) <b>Frequency Range:</b> 10 MHz - 18 GHz <b>Nominal Impedance:</b> 50 $\Omega$ <b>Maximum SWR (Reflection Coefficient):</b> <div style="margin-left: 20px;"> 10 MHz to 30 MHz &lt; 1.4 (0.166)  30 MHz to 50 MHz &lt; 1.18 (0.083)  50 MHz to 2 GHz &lt; 1.10 (0.048)  2 GHz to 12.4 GHz &lt; 1.18 (0.083)  12.4 GHz to 18 GHz &lt; 1.28 (0.123) </div> <b>Maximum Power:</b> 300 mW Average - <b>Maximum Peak Power:</b> 15W Peak - <b>Maximum Energy/Pulse:</b> 30W $\cdot\mu$ s <b>RF Connector:</b> Type N Male	
<b>Model 8482A</b> <b>Power Range:</b> -30 dBm to +20 dBm (1 $\mu$ W - 100 mW) <b>Frequency Range:</b> 100 kHz - 4.2 GHz <b>Nominal Impedance:</b> 50 $\Omega$ <b>Maximum SWR (Reflection Coefficient):</b> <div style="margin-left: 20px;"> 100 kHz to 300 kHz &lt; 1.60 (0.231)  300 kHz to 1 MHz &lt; 1.20 (0.091)  1 MHz to 2 GHz &lt; 1.10 (0.048)  2 GHz to 4.2 GHz &lt; 1.30 (0.130) </div> <b>Maximum Power:</b> 300 mW Average - <b>Maximum Peak Power:</b> 15W Peak - <b>Maximum Energy/Pulse:</b> 30W $\cdot\mu$ s <b>RF Connector:</b> Type N Male	
<b>Model 8483A</b> <b>Power Range:</b> -30 dBm to +20 dBm (1 $\mu$ W - 100 mW) <b>Frequency Range:</b> 100 kHz - 2 GHz <b>Nominal Impedance:</b> 75 $\Omega$ <b>Maximum SWR (Reflection Coefficient):</b> <div style="margin-left: 20px;"> 100 kHz to 600 kHz &lt; 1.80 (0.286)  600 kHz to 2 GHz &lt; 1.18 (0.083) </div> <b>Maximum Power:</b> 300 mW Average - <b>Maximum Peak Power:</b> 10W Peak - <b>Maximum Energy/Pulse:</b> 30W $\cdot\mu$ s <b>RF Connector:</b> Type N Male (75 $\Omega$ )	
<b>Dimensions, Including RF Connector:</b> 30 mm wide, 38 mm high, 105 mm long (1-3/16 in. x 1-1/2 in. x 5-7/8 in.). <b>Weight:</b> Net, 0.2 kg (8 oz.).	



Figure 1. Mechanical Adapter (8483A Only)

## 24. Storage and Shipment

**25. Environment.** The instrument should be stored in a clean, dry environment. The following limitations apply to both storage and shipment:

- a. Temperature, -40 to +75°C
- b. Relative humidity, less than 95%
- c. Altitude, less than 7,600 metres (25,000 feet).

**26. Original Packaging.** Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and serial number. Also, mark the container FRAGILE to assure careful handling. In any correspondence, refer to the instrument by model number and serial number.



Table 3. Recommended Test Equipment

Instrument Type	Critical Specifications	Suggested Model	Use*
Digital Voltmeter	Range: 100 mVdc to 100 Vdc Input Impedance: 10 megohms Resolution: 4-digit Accuracy: $\pm 0.05\% \pm 1$ digit	HP 3465A/B	T
Oscilloscope	Bandwidth: dc to 50 MHz Sensitivity: Vertical, 0.2V/div Horizontal, 1 ms/div	HP 180C/1801A/1821A or HP 1740A	A, T
10:1 Divider Probe	10 Megohms 10 pF	HP 10004D	A
Ohmmeter	Range: 1 ohm to 100,000 ohms Accuracy: $\pm 5\%$	HP 3465A/B	T
DC Power Supply	Range: 5 to 15 Vdc	HP 6214A	T
*A = Adjustment, T = Troubleshooting.			

## 27. INTERCONNECTIONS

28. Refer to the power meter operating and service manual for interconnecting instructions.

## 29. OPERATION

### 30. Environment

31. The operating environment for the Power Sensor should be as follows:

- Temperature, 0° to 55°C
- Relative humidity, less than 95%
- Altitude, less than 4,572 metres (15,000 feet).

### 32. Operating Precautions

33. Before the Power Sensor is connected, the following precautions must be observed.

#### WARNING

*BEFORE CONNECTING THE POWER SENSOR TO ANOTHER INSTRUMENT, ensure that the instrument and power meter are connected to the protective (earth) ground.*

*Exceeding the energy and power levels shown in paragraph 34 may result in damage to the power meter system.*

*Do not apply torque to the Power Sensor's body while connecting or disconnecting the Type N RF connector.*

## NOTE

*When using the Power Sensor with the 435 series Power Meter make sure the correct scale is mounted on the Power Meter RANGE switch. Refer to Section II of the 435 series Power Meter Operating and Service Manual.*

34. The absolute maximum RF signal level that may be coupled to the Power Sensor is:

- Maximum Average Power: 300 mW
- Maximum Peak Power: 15W (10W 8483A only)
- Maximum Energy Per Pulse: 30W· $\mu$ s.

### 35. Operating Procedures

36. Calibration is performed as follows:

a. For the HP 435 series Power Meter, set the RANGE switch to 1 mW, and adjust the CAL ADJ control to bring the needle on the meter to the CAL position.

b. For the HP 436A Power Meter, adjust the CAL ADJ control to obtain a reading of 1 mW on the digital display.

37. Instructions for use of the Power Sensor are provided in the power meter manual. Note, however, the different calibration procedure described in paragraph 36 above. During operation, the precautions in paragraph 33 must be observed.

### 38. SWR (REFLECTION COEFFICIENT PERFORMANCE TEST

39. The maximum SWR and reflection coefficient for each Power Sensor are listed in Table 4. For making these measurements, use equipment which has measurement uncertainties not exceeding those shown in the table.

### 40. FET BALANCE ADJUSTMENT

41. The sampling gate balance is affected by the relative positions of the wires in the Power Sensor which connect to pins G and H of connector J1. One wire is black and white, and the other is brown and white. Once positioned, care must be used not to displace these wires.

42. To correctly position these wires, after replacement of A2U1, connect an oscilloscope as follows to display switching transients:

a. Test point A4TP4 in the HP 435 series Power Meter, or

b. Test point A2TPAC (e) in the HP 436A Power Meter.

43. Adjust the black-and-white and brown-and-white wires until the switching transient amplitude is less than 0.8 Vp-p.

### 44. REPLACEABLE PARTS

45. Table 5 is a list of replaceable parts. Figure 2 illustrates the major parts. To order a part listed in the Replaceable Parts table, quote the Hewlett-Packard Part Number with Check Digit (CD), indicate the quantity required, and address the order to the nearest Hewlett-Packard office.

#### NOTE

*Within the USA, it is better to order directly from the HP Parts Center in Mt. View, California. Ask your nearest HP office for information and forms for the "Direct Mail Order System".*



Table 4. SWR and Reflection Coefficient

Frequency	System SWR Uncertainty	Actual Measurement	Maximum SWR (Reflection Coefficient)
<b>8481A</b>			
10 to 30 MHz	$\pm 0.030$	_____	$< 1.40 (0.166)$
30 to 50 MHz	$\pm 0.020$	_____	$< 1.18 (0.083)$
50 MHz to 2 GHz	$\pm 0.020$	_____	$< 1.10 (0.048)$
2 to 12.4 GHz	$\pm 0.020$	_____	$< 1.18 (0.083)$
12.4 to 18 GHz	$\pm 0.025$	_____	$< 1.28 (0.123)$
<b>8482A</b>			
100 kHz to 300 kHz	$\pm 0.08$	_____	$< 1.60 (0.231)$
300 kHz to 1 MHz	$\pm 0.04$	_____	$< 1.20 (0.091)$
1 MHz to 2 GHz	$\pm 0.02$	_____	$< 1.10 (0.048)$
2 GHz to 4.2 GHz	$\pm 0.02$	_____	$< 1.30 (0.130)$
<b>8483A</b>			
100 kHz to 600 kHz	$\pm 0.08$	_____	$< 1.80 (0.286)$
600 kHz to 2 GHz	$\pm 0.02$	_____	$< 1.18 (0.083)$

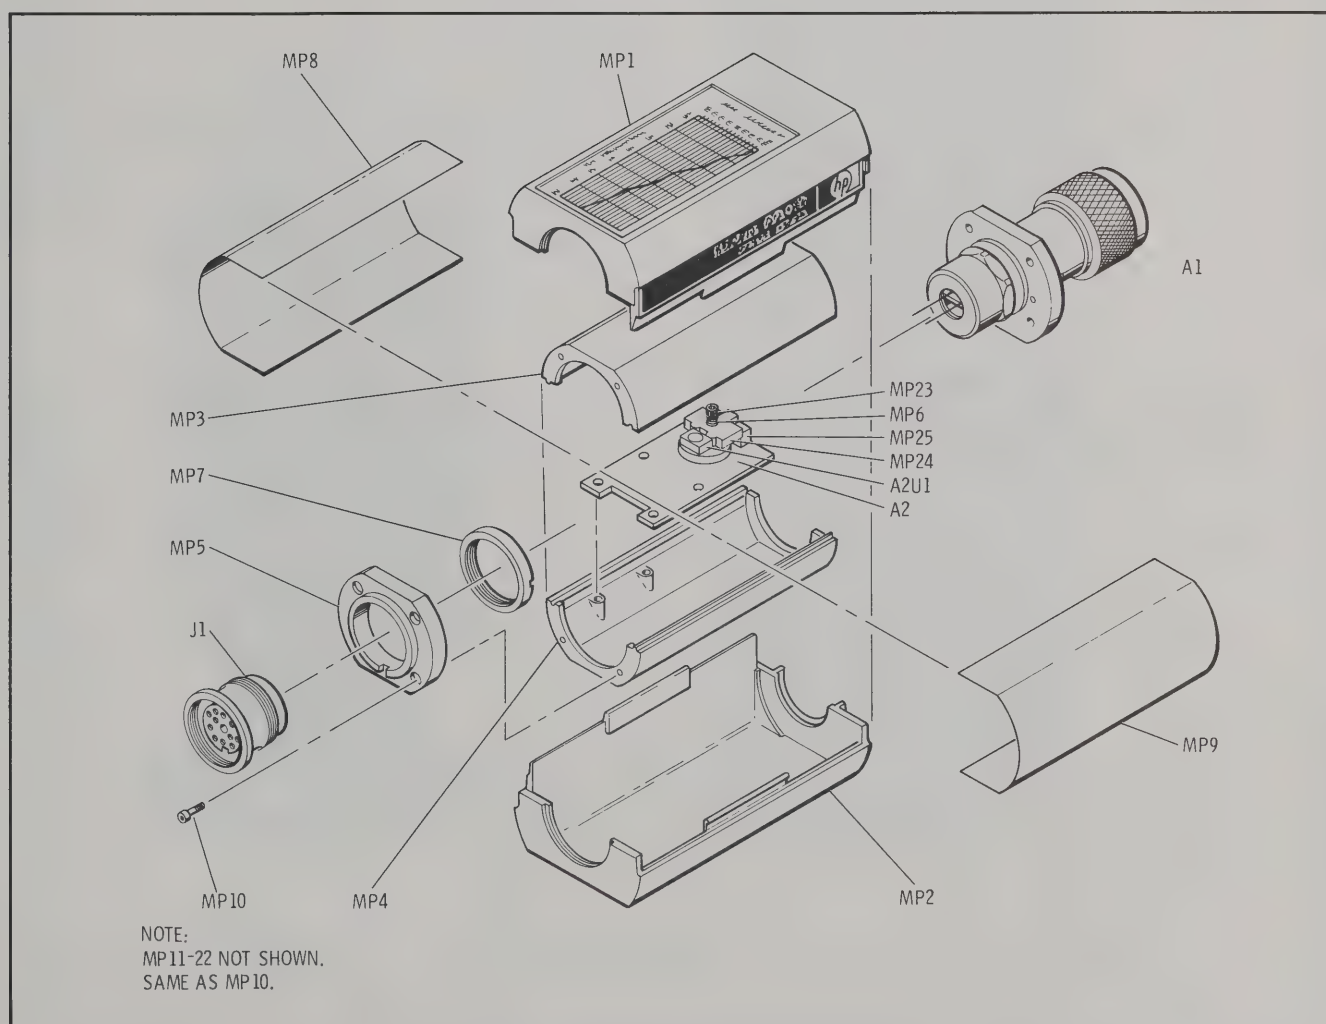


Figure 2. Illustrated Parts Breakdown

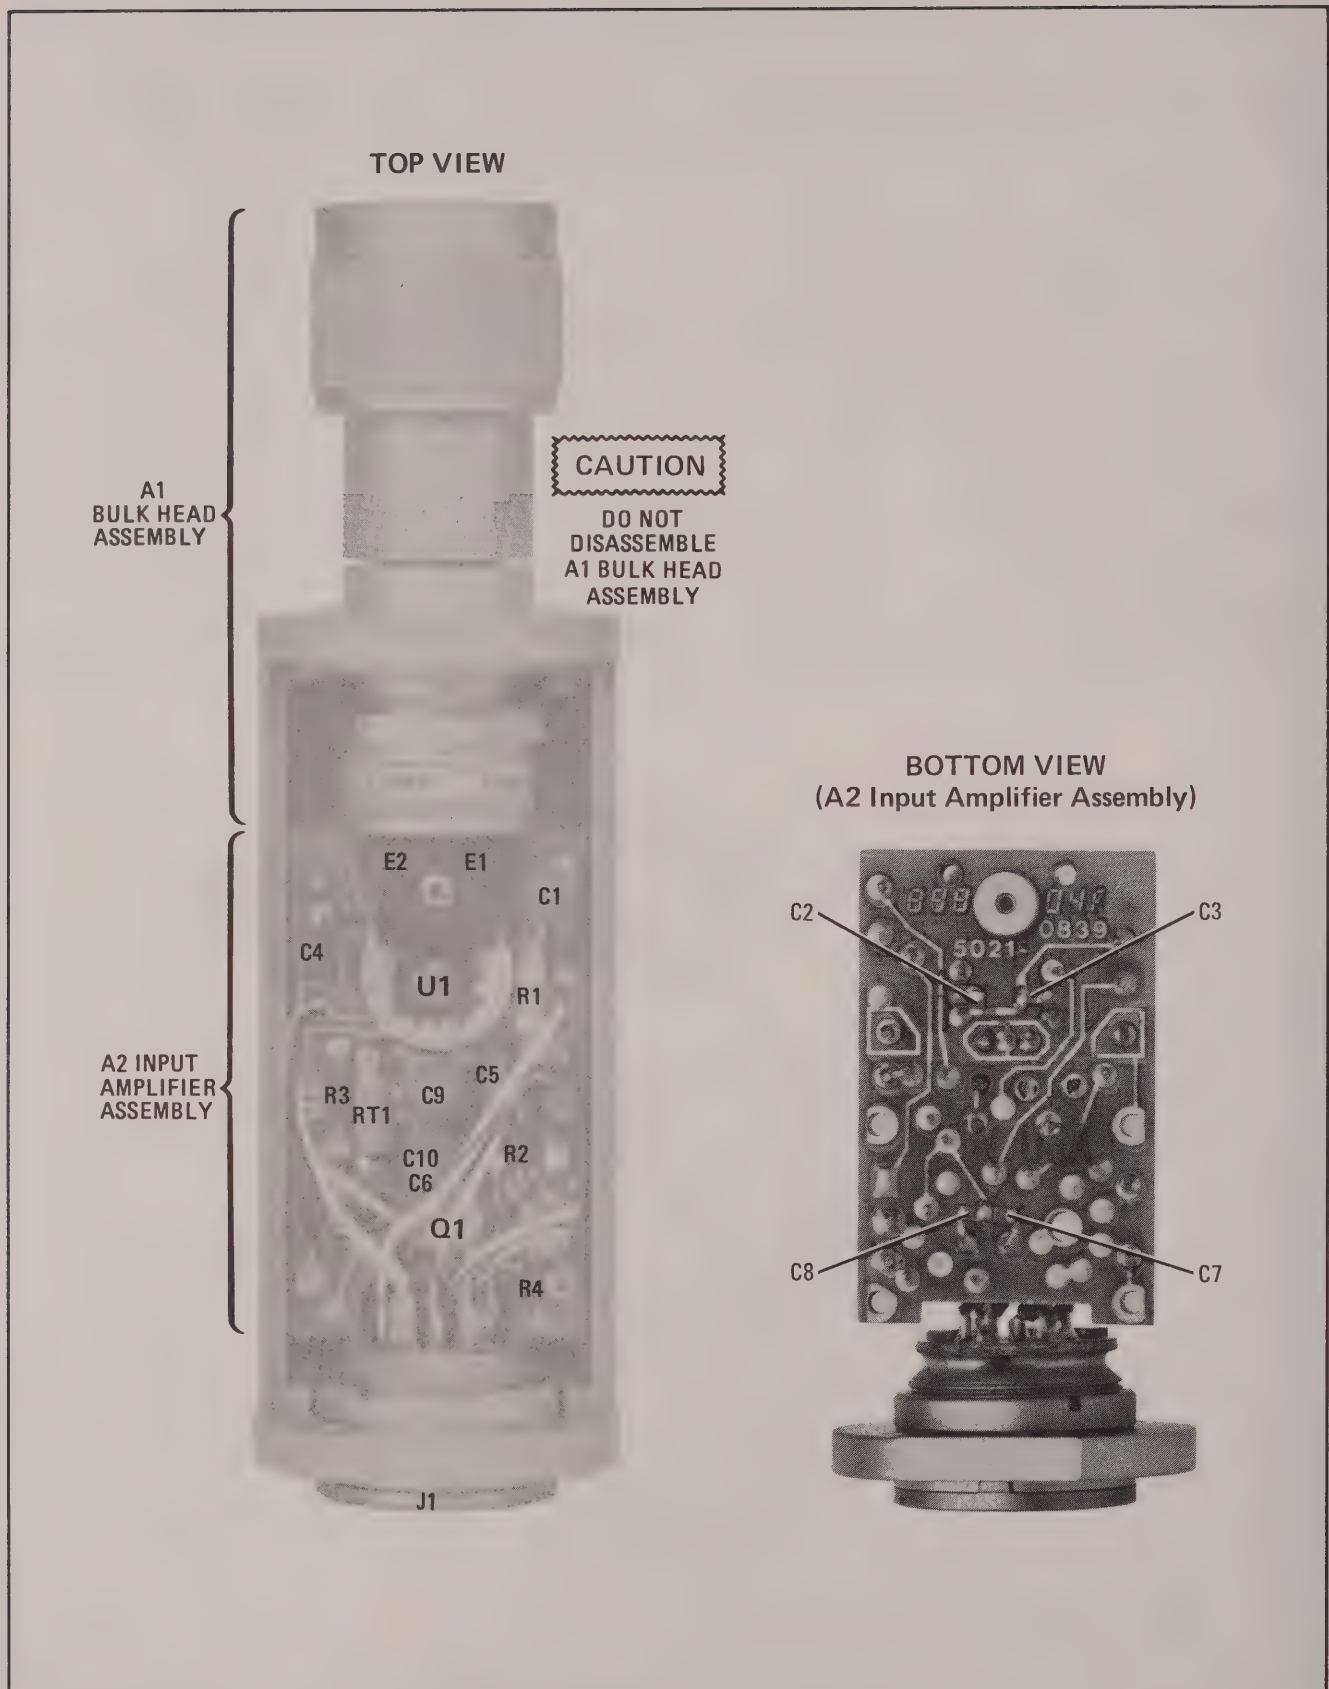


Figure 3. Component and Assembly Locations



Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	08481-60004	3	1	BULKHEAD, TYPE N (FOR 8481A ONLY)	28480	08481-60004
A1	08481-60005	4	1	BULKHEAD, APC-7 (FOR 8481A OPT 001 ONLY)	28480	08481-60005
A1	08482-60003	3	1	BULKHEAD, TYPE N (FOR 8482A ONLY)	28480	08482-60003
A1	08483-60003	4	1	BULKHEAD, TYPE N (FOR 8483A ONLY)	28480	08483-60003
A2	08481-60025	8	1	POWER SENSOR BOARD ASSEMBLY (FOR 8481A)	28480	08481-60025
A2	08482-60013	5	1	POWER SENSOR BOARD ASSEMBLY (FOR 8482A)	28480	08482-60013
A2	08483-60007	8	1	POWER SENSOR BOARD ASSEMBLY (FOR 8483A)	28480	08483-60007
A2C1	0180-2515	8	2	CAPACITOR-FXD 47UF+20% 6VDC TA (FOR 8481A ONLY)	28480	0180-2515
A2C1	0180-0555	2	1	CAPACITOR-FXD 39UF+20% 10VDC TA (FOR 8482A ONLY)	28480	0180-0555
A2C1	0180-0556	3	1	CAPACITOR-FXD 27UF+20% 15VDC TA (FOR 8483A ONLY)	28480	0180-0556
A2C3	0160-4306	7	4	CAPACITOR-FXD 100PF +10% 100VDC CER	28480	0160-4306
A2C3	0160-4306	7		CAPACITOR-FXD 100PF +10% 100VDC CER	28480	0160-4306
A2C4	0180-0594	9	1	CAPACITOR-FXD 3.3UF+20% 15VDC TA	14433	TAG-10-3.3/16-20
A2C5	0160-3094	8	1	CAPACITOR-FXD .1UF +10% 100VDC CER	28480	0160-3094
A2C6	0160-3879	7	1	CAPACITOR-FXD .01UF +20% 100VDC CER	28480	0160-3879
A2C7	0160-4306	7		CAPACITOR-FXD 100PF +10% 100VDC CER	28480	0160-4306
A2C8	0160-4306	7		CAPACITOR-FXD 100PF +10% 100VDC CER	28480	0160-4306
A2C9	0180-2515	8		CAPACITOR-FXD 47UF+20% 6VDC TA	28480	0180-2515
A2C10	0180-2545	4	1	CAPACITOR-FXD 100UF+20% 4VDC TA	28480	0180-2545
A2Q1	1854-0610	0	1	TRANSISTOR NPN SI TO-46 FT=800MHZ	28480	1854-0610
A2R1	0698-3260	9	1	RESISTOR 464K 1% .125W F TC=0+100 (FOR 8481A ONLY)	28480	0698-3260
A2R1	0757-0483	8	1	RESISTOR 562K 1% .125W F TC=0+100 (FOR 8482A ONLY)	28480	0757-0483
A2R1	0698-8352	0	1	RESISTOR 787K 1% .125W F TC=0+100 (FOR 8483A ONLY)	28480	0698-8352
A2R2	0698-7248	1	1	RESISTOR 3.16K 1% .05W F TC=0+100	24546	C3=1/8-T0-316K-G
A2R3	0698-7224	3	1	RESISTOR 316 1% .05W F TC=0+100	24546	C3=1/8-T0-316K-G
A2R4	0698-7236	7	1	RESISTOR 1K 1% .05W F TC=0+100	24546	C3=1/8-T0-1001-G
A2RT1	0811-3210	1	1	RESISTOR 31.6 5% .05W PWR TC=+5040+252	14140	1409=1/20-316K-J
A2U1	1813-0060	8	1	TO-8	28480	1813-0060
				A2 MISCELLANEOUS PARTS		
	0590-1040	1	1	THREADED INSERT-NUT 0-80 .06-LG SST	28480	0590-1040
	5040-6938	6	1	SPACER	28480	5040-6938
				CHASSIS PARTS		
J1	08481-60024	7	1	CONNECTOR ASSEMBLY, 12-PIN	28480	08481-60024
MP1	08481-40002	9	2	SHELL, PLASTIC	28480	08481-40002
MP2	08481-40002	9		SHELL, PLASTIC	28480	08481-40002
MP3	08481-20011	8	2	CHASSIS	28480	08481-20011
MP4	08481-20011	8		CHASSIS	28480	08481-20011
MP5	08481-20008	3	1	END BELL	28480	08481-20008
MP6	1460-1224	9	1	SPRING, CPRSN .1-OD, 15-LG MUW	28480	1460-1224
MP7	1251-3363	8	1	NUT, CONNECTOR MOUNTING	28480	1251-3363
MP8	08481-00002	5	2	SHIELD	28480	08481-00002
MP9	08481-00002	5		SHIELD	28480	08481-00002
MP10	3030-0422	8	13	SCREW-S/T HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP11	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP12	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP13	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP14	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP15	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP16	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP17	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP18	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP19	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP20	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP21	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP22	3030-0422	8		SCREW-SKT HD CAP 0-80 .188-IN-LG SST-302	00000	ORDER BY DESCRIPTION
MP23	3030-0436	4	1	SCREW-SKT HD CAP 0-80 .5-IN-LG SST-300	00000	ORDER BY DESCRIPTION
MP24	5040-6939	7	1	CLAMP	28480	5040-6939
MP25	5040-6940	0	1	BLOCK	28480	5040-6940
MP26	7120-3117	9	1	LABEL, ID=RIGHT	28480	7120-3117
MP26	7120-3118	0	1	LABEL, ID=LEFT (FOR 8481A ONLY)	28480	7120-3118
MP27	7120-4179	5	1	LABEL, ID (FOR 8482A ONLY)	28480	7120-4179
MP28	1250-0597	2	1	ADAPTER, COAX M=N F=N	28480	1250-0597
MP28	1250-4204	6	1		28480	1250-4204

See introduction to this section for ordering information

\*Indicates factory selected value

Table 6. Code List of Manufacturers

Mfr. No.	Manufacturer Name	Address	Zip Code
00000	ANY SATISFACTORY SUPPLIER		
14140	EDISON ELEK DIV McGRAW-EDISON	MANCHESTER NH	03130
14433	ITT SEMICONDUCTORS DIV OF ITT CORP	PALM BEACH FL	33401
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD PA	16701
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO CA	94304

#### 46. SERVICE

47. Test equipment which meets or exceeds the critical specifications in Table 3 may be used in place of the recommended instruments for troubleshooting the Power Sensor.

48. Figure 3 shows the locations of the assemblies and components. Figure 4 is the schematic diagram.

#### 49. Principles of Operation

50. Bulkhead assembly A1 presents either a 50-ohm load (8481A and 8482A) or a 75-ohm load (8483A) to the RF signal applied to the power sensor. The RF signal absorbed by the thermocouples generates a dc voltage that is proportional to the RF input power.

51. Components A2E1 and A2E2 are ferrite beads situated in the black plastic block through which the wires from A1 pass to A2. Each ferrite bead increases the self-inductance of the wire passing through the bead, causing this portion of wire to act as an RF choke. The result is to minimize RF feedthrough to the A2 input amplifier assembly.

52. The dc output from the bulkhead assembly is applied to the two field-effect transistors (FET's) in A2U1. These transistors function as a sampling gate (or chopper). The sampling rate is controlled by a 220 Hz square wave supplied by the power meter. The sampling gate output (at pin 3 of A2U1) is a 220 Hz square wave having a voltage proportional to the RF power input.

53. The output of A2U1 is amplified about 700 times by an operational amplifier made up of A2Q1 and the first amplifier stage in the power meter. Figure 5 is a simplified diagram of the complete operational amplifier.

54. The Auto Zero Feedback circuit is coupled to the Power Sensor from the Power Meter. The dc voltage used to set the zero level is applied to the input of FET A2U1Q1 by using A2R1 and the series resistance of the thermocouple A1TC1 as a voltage divider.

55. When the Power Sensor is used with the HP 436A Power Meter, the short at J1-K (MOUNT RESISTOR) indicates the type of power sensor in use. As a result, the power meter automatically selects the proper measurement range ( $-30$  to  $+20$  dBm). With the HP 435 series Power Meter, this short serves no function.

#### 56. Troubleshooting

57. The troubleshooting information which follows is intended to isolate a problem to a stage. The defective component can then be identified by voltage and resistance checks. The field-effect transistors (FET's) in A2U1 are slightly light sensitive. As a result, dc levels are shifted slightly when the FET's are exposed.

#### CAUTION

*Be extremely careful when measuring across the gold wires. They are delicate and can be damaged easily.*

58. The A1 bulkhead assembly normally supplies  $+12 \pm 3$  mV when the RF input is 100 mW. Measure this voltage at A2U1 pin 1. This dc voltage will vary somewhat if the A2 input amplifier is inoperative, or if the bulkhead assembly is disconnected from the input amplifier. Resistance measured across the two gold wires leading to the A2 assembly should be  $200 \pm 10$  ohms (8481A),  $245 \pm 12.5$  ohms (8482A) or  $375 \pm 17.5$  ohms (8483A).



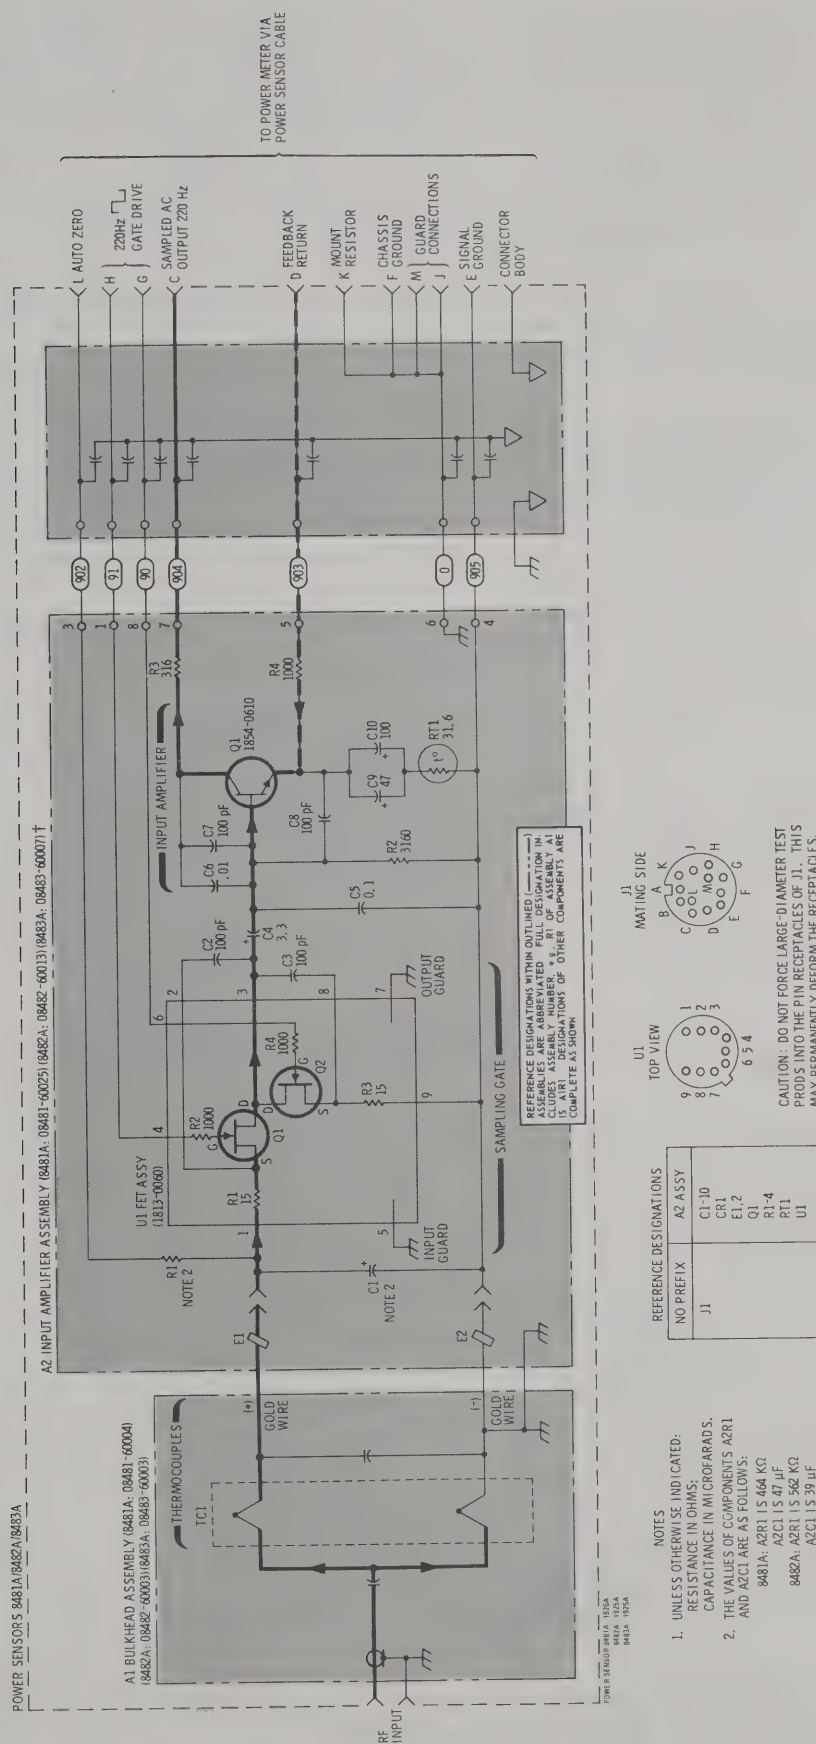


Figure 4. Schematic Diagram

Note that excessive power will damage the thermocouples and cause their resistance to increase. If the A1 Bulkhead Assembly is defective, the entire Bulkhead Assembly must be replaced.

59. The FET's in A2U1 may be checked by the following procedure:

a. Disconnect the cables from the Power Sensor.

b. Remove the upper chassis from the Power Sensor. (Refer to disassembly procedures, paragraph 68).

c. Measure the resistance between pins 1 and 2 of the A2U1. The resistance should be  $15 \pm 0.75$  ohms. The same resistance should be found between pins 8 and 9 of A2U1.

d. Short pins 4, 6, and 9 of A2U1. While the pins are shorted, measure the resistance between pins 2 and 3, and between pins 3 and 8, of A2U1. The resistance should be less than 40 ohms.

e. Set a power supply to 10 Vdc.

f. Connect the positive side of the power source to the Power Sensor signal ground. Connect the negative power supply lead to pins 4 and 6 of A2U1.

g. Measure the resistance between pins 2 and 3 of A2U1. Also measure the resistance between pins 3 and 8 of A2U1. In both cases, the resistance should be several hundred times the resistance found in step d.

60. The 220 Hz drive from the power meter should have the following levels:

a.  $-0.05 \pm 0.05$  Vdc (top of square wave).

b.  $> -9$  Vdc (bottom of square wave).

61. In most cases it may be assumed that the operational amplifier (made up of A2Q1 and the first amplifier in the power meter) is operating correctly if the dc voltage on the metal cover of A2Q1 (collector) is  $-70 \pm 30$  mVdc.

## 62. REPAIR

## 63. Cleanliness

64. Do not handle the A2 input amplifier circuit board more than necessary. Dirt or moisture from the hands may make the circuits inoperative. Do not use solder-flux remover on the circuit board. It is particularly important to keep the area around A2U1 clean.

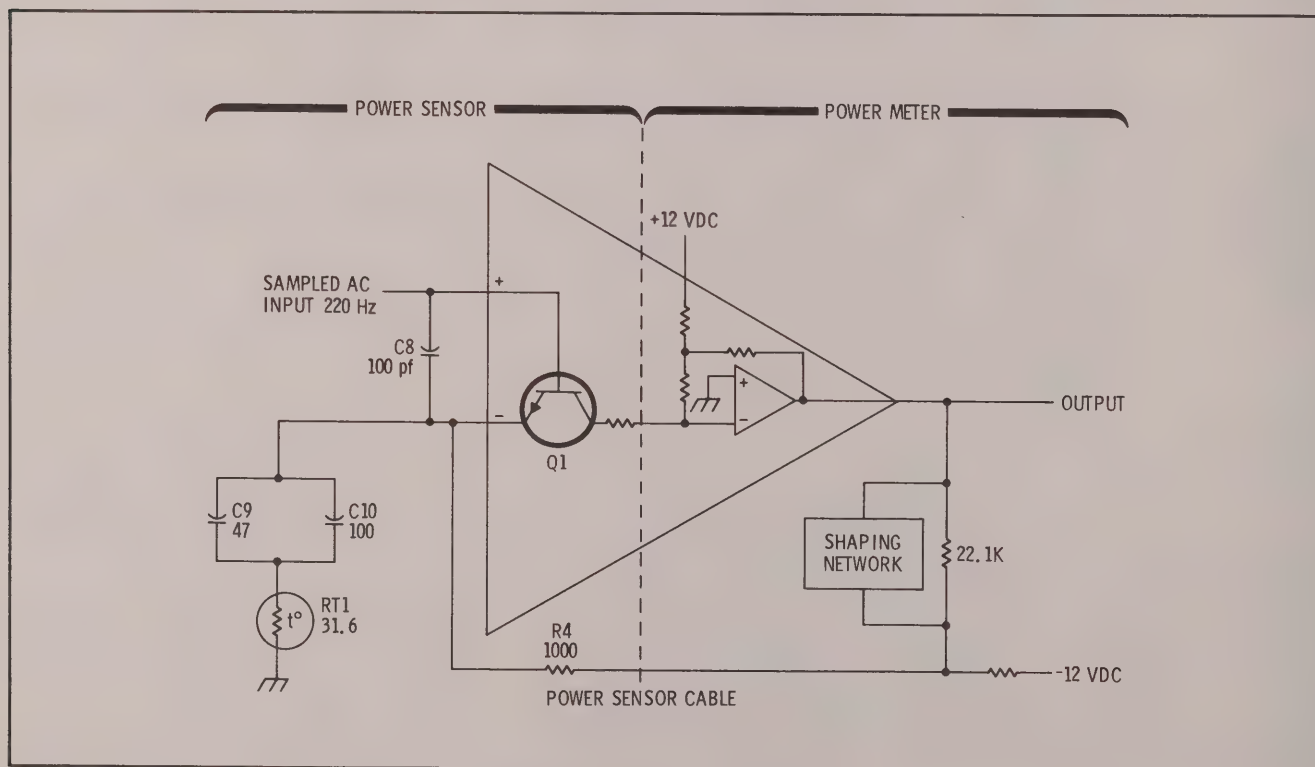


Figure 5. Operational Amplifier



## 65. Soldering Techniques

66. The Power Sensor is a high-sensitivity device, and is affected by very small differences in temperature between its components. Therefore, after the performance of any soldering in the unit, several hours must be allowed for the unit to reach thermal equilibrium before it is used or tested.

67. Capacitors A2C2, A2C3, A2C7, and A2C8 (Figure 3) require low-temperature soldering techniques. The connections to these capacitors are a gold film deposited on a ceramic base. Molten solder results in the gold forming an amalgam with the solder, and the consequent removal of the gold from its ceramic base. Soldering must be done quickly, and a low-temperature soldering iron and solder must be used. The capacitors must be discarded if unsoldered. If integrated circuit A2U1 or transistor A2Q1 is replaced, two of these capacitors must be removed, and therefore must be replaced with new ones. The required low-temperature soldering iron and solder are as follows:

a. Hexacon Thermo-O-Trac soldering iron with J206X tip, temperature 600° F (311°C).

b. Low-temperature solder SN 62, HP part number 5090-0410.

## 68. Disassembly Procedures

### CAUTIONS

*Disassembly must be performed in the sequence described below, otherwise damage may be caused to the two gold wires between the A1 bulkhead assembly and the A2 input amplifier assembly. If these wires are damaged, the A1 bulkhead assembly must be returned to the factory for repair.*

*Each Power Sensor has an individually prepared graph on the housing. If more than one Power Sensor is disassembled, be sure to use the proper housing for each when they are reassembled.*

69. Disassemble the Power Sensor by performing the following steps:

### CAUTION

*The gold wires connecting the A1 Bulkhead Assembly and the A2 Input Amplifier Assembly are extremely delicate and*

*(Caution cont'd)*  
*may be easily broken. Be careful when working around them.*

a. Insert the blade of a small screwdriver between the two-piece plastic shell at the rear of the Power Sensor. Gently pry the sections apart. (See Figure 6).

b. Proceed to the other side of the connector and again pry the cover sections apart. Remove the shells and magnetic shields.

c. Position the Power Sensor as shown in Figure 7 (top). The small hole 5 should be on the left side of the RF input connector. Remove the allen cap screws 1, 2, 10, and 13. Loosen 11 and 12. Remove the upper chassis from the Power Sensor.

d. Remove the spring clamp cap screw 7 to free the gold leads which come from the Bulkhead Assembly.

e. Remove cap screws 3, 4, and 6.

f. Slide the Bulkhead Assembly straight out from the chassis.

g. Remove cap screws 8, 9, 11, 12, 14, and 15.

e. Lift the A2 Input Amplifier and J1 connector out of the chassis.

## 70. Reassembly Procedures

### CAUTION

*The gold wires connecting the A1 Bulkhead Assembly and the A2 Input Amplifier Assembly are extremely delicate and may be easily broken. Be careful when working around them.*

a. Place the printed circuit board and connector into place.

b. Cap screws 8, 9, 11, 12, 14, and 15 must be inserted but not tightened. Refer to Figure 7.

c. Center the circuit board so there is equal air gap between each side and the chassis. Tighten 8, 9, 14, and 15.

d. With small hole ⑤ to the left, carefully insert the gold leads on A1 bulkhead assembly through the holes in the black plastic guide on A2 input amplifier.

e. Insert screws ③, ④, and ⑥. Tighten only screw ⑥.

f. Position the ends of the gold wires over the pads on A2U1. The wires should not pass over the hole in the pad. Lightly clamp the leads in

place with screw ⑦. DO NOT fully compress the spring.

g. Place the upper chassis in position and insert cap screws ①, ②, ⑩, and ⑬.

h. Tighten ①, ②, ③, and ④.

i. Tighten ⑩, ⑪, ⑫, and ⑬.

j. Place the plastic shells, magnetic shields, and the chassis together as shown in Figure 2. Snap the plastic shells together.

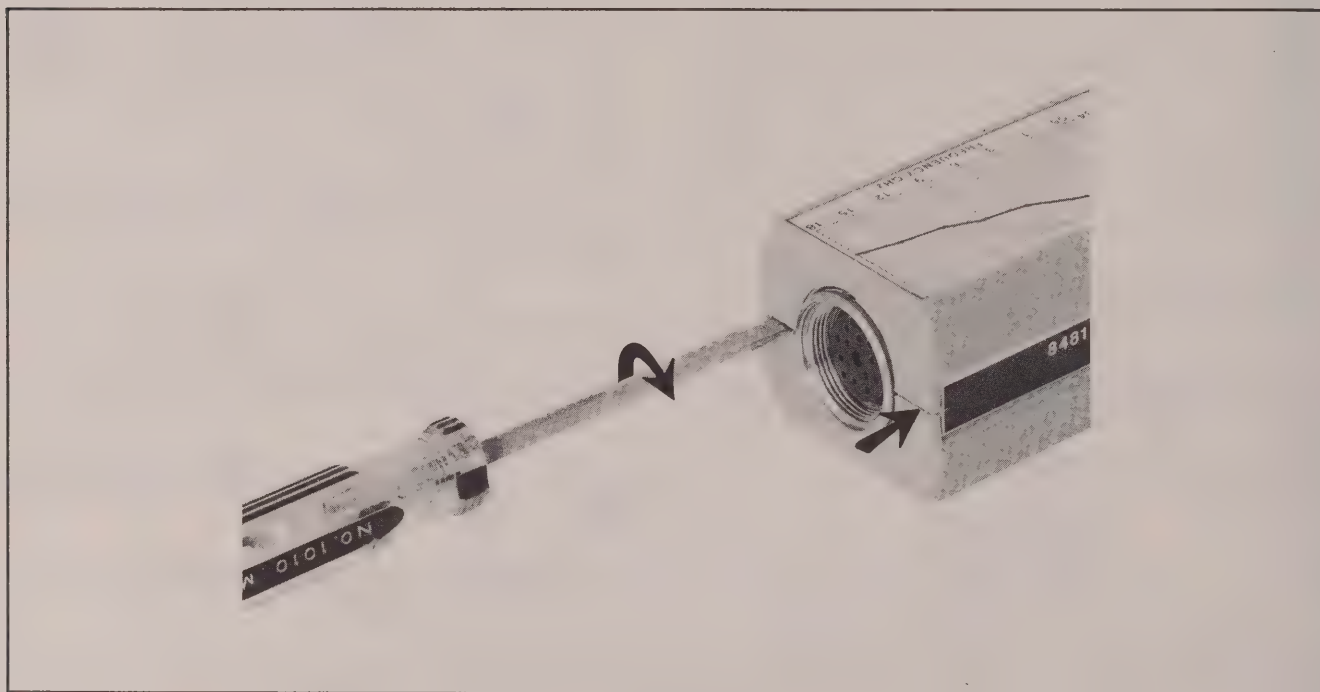


Figure 6. Removing the Power Sensor's Cover



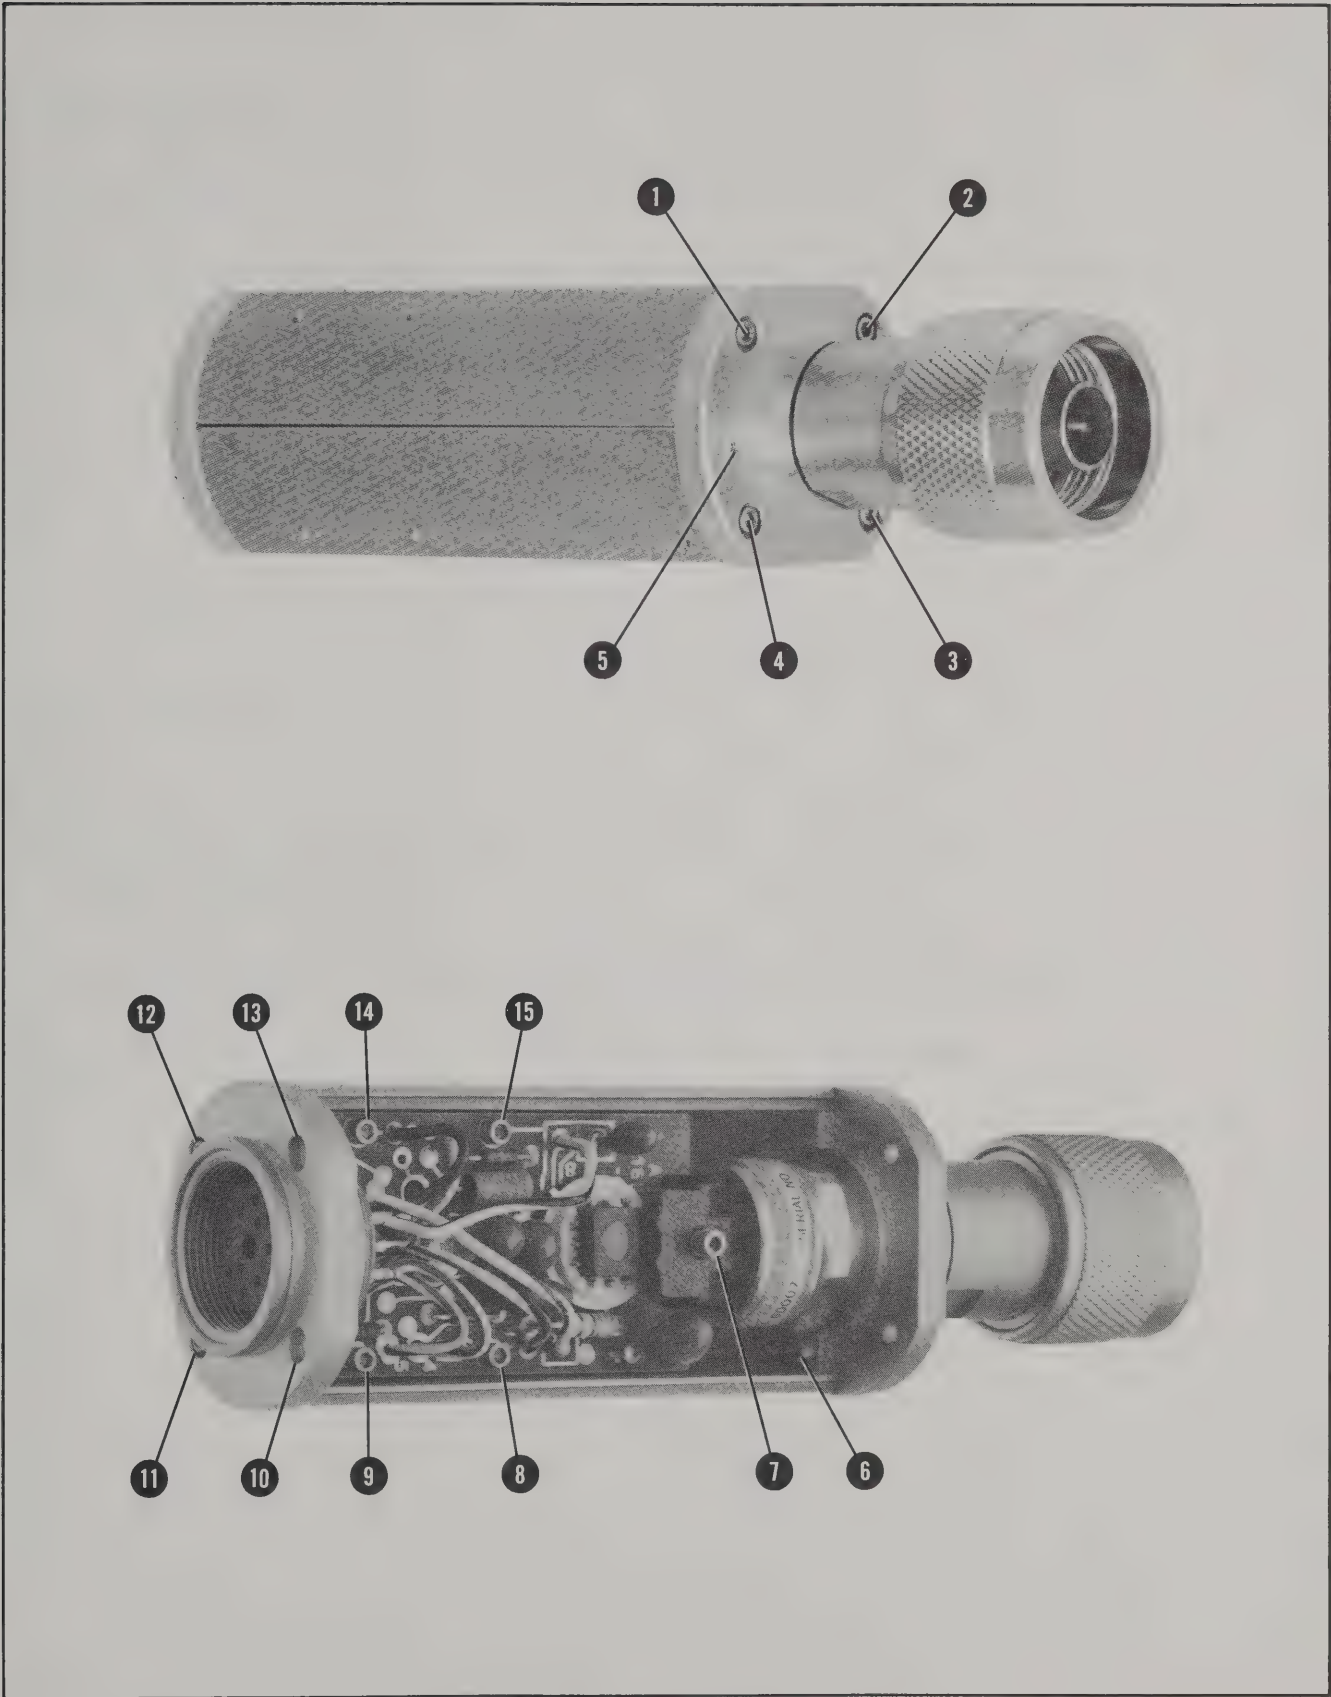


Figure 7. Power Sensor Hardware Locations





**APPENDIX I****MANUAL CHANGES**

This Appendix contains information for adapting this manual to instruments for which the content does not apply directly.

To adapt this manual to your instrument, refer to Table I-1 and make the changes listed opposite your instrument serial number.

**Table I-1. Manual Changes by Serial Number.**

<b>Serial Prefix or Number</b>	<b>Make Manual Changes</b>
8481A:1550A	✓ A
8482A:1551A	A
8483A:1602A	A

**CHANGE INSTRUCTIONS****CHANGE A**

Page 8, Table 5:

Change A2 part numbers as follows:

08481-60025 to 08481-60017

08482-60013 to 08482-60005

08483-60007 to 08483-60004

Change J1 to 1251-3228 CONNECTOR, 12 PIN FEMALE MULTICONTACT 90949 91T-3638.

Page 10, Figure 4:

Replace Figure 4 with Figure I-1.

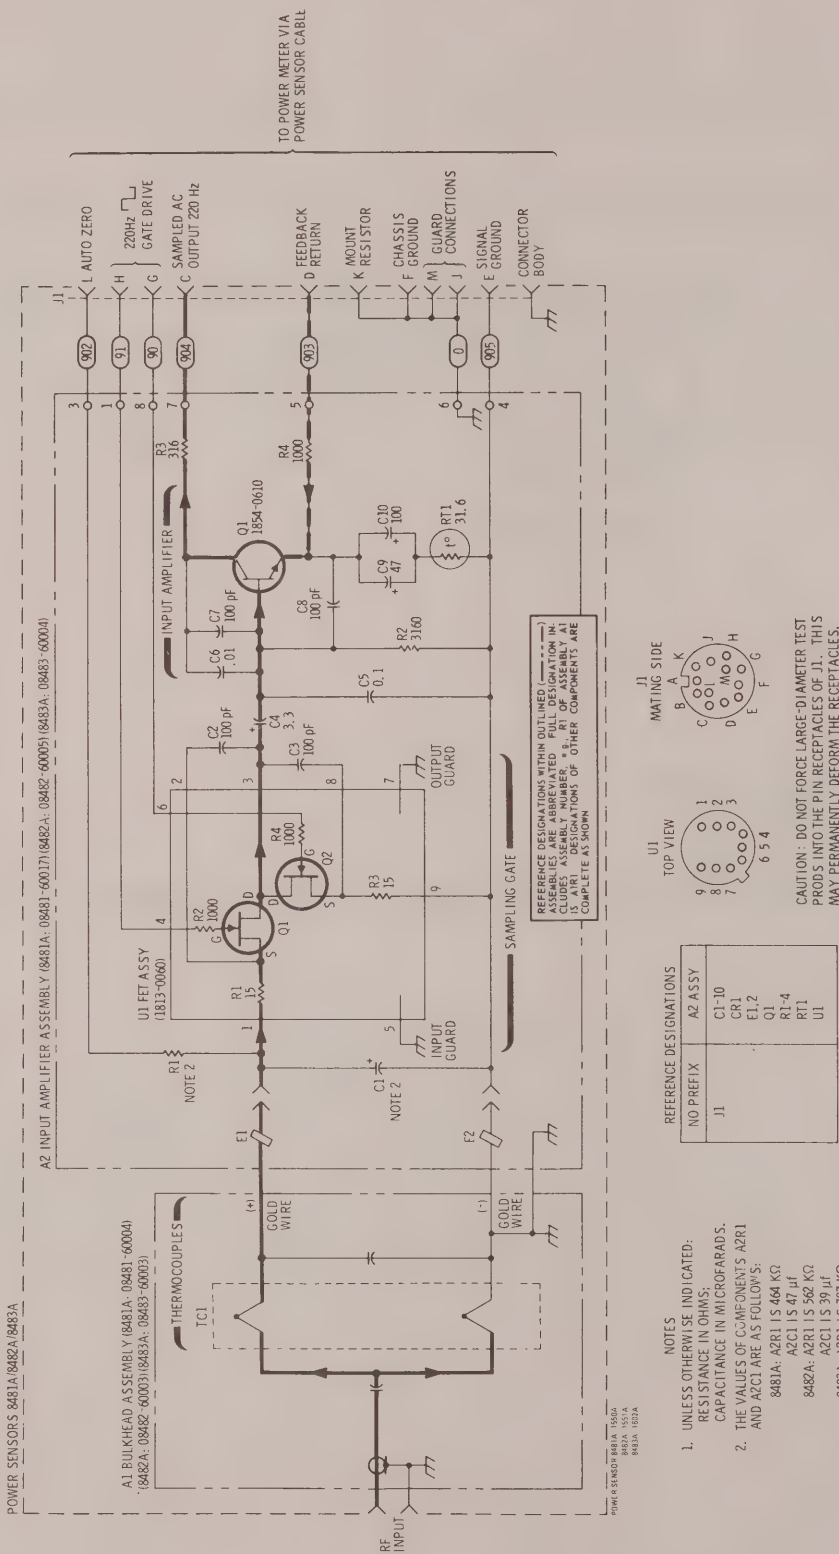


Figure I-1. Schematic Diagram (P/O Change A)





# SALES OFFICES

## Arranged alphabetically by country

### ANGOLA

Telebra  
Empresa Técnica de  
Equipamentos  
Elétricos, S.A.R.L.  
R. Barbosa Rodrigues,  
41-1° DT.  
Caixa Postal, 6487  
**Luanda**  
Tel: 35515/6  
**ARGENTINA**  
Hewlett-Packard Argentina S.A.  
Santa Fe 2035, Martínez  
6140 Buenos Aires  
Tel: 792-1239, 798-6086  
Telex: 122443 AR CIGY  
Biotron S.A.C.I.y M.  
Avda. Paseo Colon 221  
9 piso  
1399 Buenos Aires  
Tel: 30-4846/185/18384  
34-9356/0460/4551  
Telex: (33) 017595 BIO AR

**AUSTRALIA**  
**AUSTRALIA CAPITAL TERR.**  
Hewlett-Packard Australia Pty.  
Ltd.  
121 Willongong Street  
**Fyshwick**, 2609  
Tel: 804244  
Telex: 62650  
**NEW SOUTH WALES**  
Hewlett-Packard Australia Pty.  
Ltd.  
31 Bridge Street  
**Pymble**, 2073  
Tel: 4496566  
Telex: 21561

**QUEENSLAND**  
Hewlett-Packard Australia Pty.  
Ltd.  
5th Floor  
Teachers Union Building  
495-499 Boundary Street  
**Spring Hill**, 4000  
Tel: 2291544

**SOUTH AUSTRALIA**  
Hewlett-Packard Australia Pty.  
Ltd.  
153 Greenhill Road  
**Parkside**, 5063  
Tel: 2725911  
Telex: 82536  
**VICTORIA**  
Hewlett-Packard Australia Pty.  
Ltd.  
31-41 Joseph Street  
**Blackburn**, 3130  
Tel: 89-6351  
Telex: 31024 MELB

**WESTERN AUSTRALIA**  
Hewlett-Packard Australia Pty.  
Ltd.  
141 Stirling Highway  
**Nedlands**, 6009  
Tel: 3865455  
Telex: 93859

**AUSTRIA**  
Hewlett-Packard Ges.m.b.H.  
Wielstrasse 29  
P.O. Box 7  
A-1205 Vienna  
Tel: 35-16-21-0  
Telex: 13582/135066  
Hewlett-Packard Ges.m.b.H.  
Wielstrasse 29  
A-1205 Wien  
Tel: 35-16-21  
Telex: 135066

**BAHRAIN**  
Medical Only  
Wael Pharmacy  
P.O. Box 648  
**Bahrain**  
Tel: 54886, 56123  
Telex: 8550 WAEI GJ  
Al Hamidiya Trading and  
Contracting  
P.O. Box 20074  
**Manama**  
Tel: 259978, 259958  
Telex: 8895 KALDIA GJ

**BANGLADESH**  
The General Electric Co. of  
Bangladesh Ltd.  
Magnet House 72  
Dilkusha Commercial Area  
**Motijholla**, Dacca 2  
Tel: 252415, 252419  
Telex: 734

**BELGIUM**  
Hewlett-Packard Benelux  
S.A./N.V.  
Avenue du Col-Vert, 1,  
(Grootkruislaan)  
B-1170 Brussels  
Tel: (02) 660 50 50  
Telex: 2367 GALGUR RB

**BRAZIL**  
Hewlett-Packard do Brasil  
I.E.C. Ltda.  
Alameda Rio Negro, 750  
Alphaville  
06400 Barueri SP  
Tel: 429-3222  
Hewlett-Packard do Brasil  
I.E.C. Ltda.  
Rua Padre Chagas, 32  
90000-Pôrto Alegre-RS  
Tel: 22-2998, 22-5621  
Hewlett-Packard do Brasil  
I.E.C. Ltda.  
Av. Epitacio Pessoa, 4664  
22471-Rio de Janeiro-RJ  
Tel: 286-0237  
Telex: 021-21905 HPBR-BR

**CANADA**  
**ALBERTA**  
Hewlett-Packard (Canada) Ltd.  
11620A - 168th Street  
Edmonton T6M 3T9  
Tel: (403) 452-3670  
Telex: 610-871-2431  
**BRITISH COLUMBIA**  
Hewlett-Packard (Canada) Ltd.  
10691 Shellbridge Way  
Richmond V6X 2W7  
Tel: (604) 270-2277  
Telex: 610-925-5059

**MANITOBA**  
Hewlett-Packard (Canada) Ltd.  
380-550 Century St.  
St. James,  
Winnipeg R3H 0Y1  
Tel: (204) 786-6701  
Telex: 610-871-3531  
**NOVA SCOTIA**  
Hewlett-Packard (Canada) Ltd.  
P.O. Box 931  
800 Windmill Road  
Dartmouth B3B 1L1  
Tel: (902) 469-7820  
Telex: 610-271-4482

**ONTARIO**  
Hewlett-Packard (Canada) Ltd.  
1020 Morrison Dr.  
Ottawa K2H 8K7  
Tel: (613) 820-6483  
Telex: 610-563-1636  
Hewlett-Packard (Canada) Ltd.  
6877 Goreway Drive  
Mississauga L4V 1M8  
Tel: (416) 678-9430  
Telex: 610-492-4246

**QUEBEC**  
Hewlett-Packard (Canada) Ltd.  
275 Hymus Blvd.  
Pointe Claire H9R 1G7  
Tel: (514) 697-4232  
Telex: 610-422-3022  
**FOR CANADIAN AREAS NOT LISTED:**  
Contact Hewlett-Packard (Canada) Ltd. in Mississauga.

**CHILE**  
Jorge Calcagni y Cia. Ltda.  
Arturo Burihe 065  
Casilla 16475  
Correo 9, Santiago  
Tel: 220222  
Telex: JCALCAGNI

**COLOMBIA**  
Instrumentación  
Henrik A. Langebaek & Kier  
S.A.  
Carrera 7 No. 48-75  
Apartado Aéreo 6287  
**Bogotá**, D.E.  
Tel: 269-8877  
Telex: 44400  
Instrumentación  
H.A. Langebaek & Kier S.A.  
Carrera 63 No. 49-A-31  
Apartado 54098  
**Medellín**  
Tel: 304475

**COSTA RICA**  
Cientifica Costarricense S.A.  
Avenida 2, Calle 5  
San Pedro de Montes de Oca  
Apartado 10159  
**San José**  
Tel: 24-38-20, 24-08-19  
Telex: 2367 GALGUR RB

**CYPRUS**  
Kyronics  
19 Gregorios Xenopoulos  
Street  
P.O. Box 1152  
**Nicosia**  
Tel: 45628/29  
Telex: 3018  
**CZECHOSLOVAKIA**  
Hewlett-Packard  
Obchodni zastupitelství v CSSR  
Pisemny styl  
Post. schranka 27  
CS 118 01 Praha 011  
CSSR  
Vývojova a Provozní Závadna  
Výzkumných Ústavů v  
Bechovicích  
CSSR-25097 Bechovice u  
Prahy  
Tel: 89 93 41  
Telex: 12133  
Institute of Medical Bionics  
Vyskumny Ústav Lekarskej  
Bioniky  
Jedlova 6  
CS-88346 Bratislava-  
Kramare  
Tel: 44-551  
Telex: 93229

**DENMARK**  
Hewlett-Packard A/S  
Datavej 52  
DK-3460 Blerkerød  
Tel: (02) 81 66 40  
Telex: 37409 hpas dk  
Hewlett-Packard A/S  
Navervej 1  
DK-8600 Silkeborg  
Tel: (06) 82 71 66  
Telex: 37409 hpas dk  
**ECUADOR**  
CYEDE Cia. Ltda.  
P.O. Box 6423 CCI  
Av. Eloy Alfaro 1749  
Quito  
Tel: 450-975, 243-052  
Telex: 2548 CYEDE ED  
Medical Only  
Hospitalar S.A.  
Casilla 3590  
Robles 625  
Quito  
Tel: 545-250

**EGYPT**  
I.E.A.  
International Engineering  
Associates  
24 Hussein Hegazi Street  
Kasr-el-Aini  
**Cairo**  
Tel: 23 829  
Telex: 93830  
SAMITRO  
Sami Amin Trading Office  
18 Abdel Aziz Gawish  
**Abdine-Cairo**  
Tel: 24932

**EL SALVADOR**  
IPESA  
Bulevar de los Heroes 11-48  
Edificio Sarah 1148  
**San Salvador**  
Tel: 252787

**ETHIOPIA**  
Abdella Abdulmalik  
P.O. Box 2635  
**Addis Ababa**  
Tel: 11 93 40  
**FINLAND**  
Hewlett-Packard Oy  
Revontuliente 7  
SF-02100 Espoo 10  
Tel: (90) 455 0211  
Telex: 121563 hewpa sf

**FRANCE**  
Hewlett-Packard France  
Zone d'activités de  
Courtabouet  
Avenue des Tropiques  
Boite Postale 6  
91401 Orsay-Cédex  
Tel: (1) 900 78 25  
Telex: 44400  
Hewlett-Packard France  
Chemin des Moulins  
B.P. 162  
69130 Ecully  
Tel: (78) 33 81 25  
Telex: 304475  
Hewlett-Packard France  
20, Chemin de La Cèprière  
31081 Toulouse  
Le Mirail-Cédex  
Tel: (61) 40 11 12

**GERMANY FEDERAL REPUBLIC**  
Hewlett-Packard GmbH  
Vertriebszentrale Frankfurt  
Berner Strasse 117  
Postfach 560 140  
D-6000 Frankfurt 56  
Tel: (06011) 50041  
Telex: 04 13249 hpfrfm d  
Hewlett-Packard GmbH  
Technisches Büro Böblingen  
Herrenberger Strasse 110  
D-7030 Böblingen,  
Württemberg  
Tel: (07031) 667-1  
Telex: 07265739 bbn  
Hewlett-Packard GmbH  
Technisches Büro Düsseldorf  
Emanuel-Leutze-Str. 1  
(Seestern)  
D-4000 Düsseldorf  
Tel: (0211) 5971-1  
Telex: 085166 533 hpdd d  
Hewlett-Packard GmbH  
Technisches Büro Hamburg  
Kapsaldring 5  
D-2000 Hamburg 60  
Tel: (040) 63804-1  
Telex: 21 63 032 hpnd d  
Hewlett-Packard GmbH  
Technisches Büro Hannover  
Am Grossmarkt 6  
D-3000 Hannover 91  
Tel: (0511) 46 60 01  
Telex: 092 3259  
Hewlett-Packard GmbH  
Technisches Büro Nürnberg  
Neumeyerstrasse 90  
D-8500 Nürnberg  
Tel: (0911) 52 20 83  
Telex: 0623 860

**GREECE**  
Kostas Karayannis  
8 Omirou Street  
**Athens** 133  
Tel: 32 30 303/32/73 731  
Telex: 21 59 62 RKAR GR

**HONG KONG**  
Hewlett-Packard France  
18, rue du Canal de la Marne  
67300 Schiltigheim  
Tel: (88) 83 08 10  
Telex: 890141F  
Hewlett-Packard France  
Immeuble pénière  
rue van Gogh  
59650 Villeneuve D'Ascq  
Tel: (20) 91 41 25  
Telex: 160124F  
Hewlett-Packard France  
Bâtiment Ampère  
Rue de la Commune de Paris  
B.P. 300  
93153 Le Blanc Mesnil-  
Cédex  
Tel: (01) 931 88 50  
Telex: 211032F  
Hewlett-Packard France  
Av. du Pdt. Kennedy  
33700 Marignac  
Tel: (56) 97 01 81  
Hewlett-Packard France  
Immeuble Lorraine  
Boulevard de France  
91035 Evry-Cédex  
Tel: 077 96 60  
Telex: 692315F  
Hewlett-Packard France  
23 Rue Lothaire  
57000 Metz  
Tel: (87) 65 53 50  
Telex: 011-3751

**INDIA**  
Blue Star Ltd.  
Sahas  
41/42 Vir Savarkar Marg  
Prabhadevi  
**Bombay** 400 025  
Tel: 45 78 87  
Telex: 011-4093  
Blue Star Ltd.  
Band Box House  
Prabhadevi  
**Bombay** 400 025  
Tel: 45 73 01  
Telex: 011-3751  
Blue Star Ltd.  
Bhandari House  
9 Nehru Place  
**New Delhi** 110 024  
Tel: 682547  
Telex: 031-2463  
Blue Star Ltd.  
T.C. 7/603 'Poomrini'  
Maruthankuzhi  
**Trivandrum** 695 013  
Tel: 65799  
Telex: 0884-259  
Blue Star Ltd.  
11 Magarath Road  
**Bangalore** 560 025  
Tel: 55668  
Telex: 0845-430  
Blue Star Ltd.  
Meeakshi Mandiram  
XXXXV/1379-2 Mahatma  
Gandhi Rd.  
**Cochin** 682 016  
Tel: 32069  
Telex: 085-514  
Blue Star Ltd.  
11-117/1 Sarojini Devi Road  
**Secunderabad** 500 033  
Tel: 70126  
Telex: 0155-459  
Blue Star Ltd.  
133 Kodambakkam High Road  
**Madras** 600 034  
Tel: 82057  
Telex: 041-379  
**ICELAND**  
Medical Only  
Elding Trading Company Inc.  
Hafnarvöll - Tryggvagötu  
P.O. Box 895  
**IS-REYKJAVIK**  
Tel: 1 58 201 63 D3  
Telex: 018 3405 hpbn d

**INDONESIA**  
BERCA Indonesia P.T.  
P.O. Box 496/Jkt.  
Jln. Abdul Muis 62  
**Jakarta**  
Tel: 349255, 349886  
Telex: 46748 BERSIL IA  
**GUAM**  
Guam Medical Supply, Inc.  
Suite C, Airport Plaza  
P.O. Box 8947  
**Tamuning** 96911  
Tel: 646-4513  
**GUATEMALA**  
IPESAT  
Avenida Reforma 3-48  
Zona 9  
**Guatemala City**  
Tel: 316627, 314786,  
66471-5, ext. 9  
Telex: 4192 Teltro Gu  
**HONG KONG**  
Hewlett-Packard Hong Kong  
Ltd.  
11th Floor, Four Seas Bldg.  
212 Nathan Rd.  
**Kowloon**  
Tel: 3-697446 (5 lines)  
Telex: 36678 HX  
Medical/Analytical Only  
Schmidt & Co. (Hong Kong)  
Ltd.  
Wing On Centre, 28th Floor  
Connaught Road, C.  
**Hong Kong**  
Tel: 4555644  
Telex: 74766 SCHMX HX

**JAPAN**  
Yokogawa-Hewlett-Packard  
Ltd.  
29-21, Takaido-Higashi  
3-chome  
Suginami-ku, Tokyo 168  
Tel: 03-331-6111  
Telex: 232-2024 YHP-Tokyo  
Yokogawa-Hewlett-Packard  
Ltd.  
Chuo Bldg., 4th Floor  
4-20, Nishinakajima 5-chome  
Yodogawa-ku, Osaka-shi  
**Osaka**, 532  
Tel: 06-304-6021  
Telex: 523-3624  
Yokogawa-Hewlett-Packard  
Ltd.  
Sunilomo Seimei Nagaya Bldg.  
11-2 Shimosajima-cho,  
Nakamura-ku, Nagoya, 450  
Tel: 052-571-5170  
Yokogawa-Hewlett-Packard  
Ltd.  
Tanigawa Building  
2-24-1 Tsuruya-cho  
**Yokohama**, 221  
Tel: 045-312-1252  
Telex: 382-3204 YHP YOK

**KENYA**  
ADCOM Ltd., Inc.  
P.O. Box 30070  
**Nairobi**  
Tel: 336055/56  
Telex: 22201/22301  
Medical Only  
International Aeradio (E.A.) Ltd.  
P.O. Box 19012  
**Nairobi**  
Tel: 336055/56  
Telex: 22201/22301  
**ITALY**  
Hewlett-Packard Italiana S.p.A.  
Via G. Di Vittorio, 9  
20063 Cernusco Sul  
Naviglio (MI)  
Tel: (2) 903691  
Telex: 334632 HEWPACKIT  
Hewlett-Packard Italiana S.p.A.  
Via Turazza, 14  
35100 Padovana  
Tel: (49) 664888  
Telex: 430315 HEWPACKIT  
Hewlett-Packard Italiana S.p.A.  
Via G. Armetini 10  
I-00143 Roma  
Tel: (06) 54 69 61  
Telex: 610514  
Hewlett-Packard Italiana S.p.A.  
Corso Giovanni Lanza 94  
I-10133 Torino  
Tel: (011) 659308  
Telex: 221079  
Hewlett-Packard Italiana S.p.A.  
Via Principe Nicola 43 G/C  
I-95126 Catania  
Tel: (095) 37 05 04  
Telex: 970291  
Hewlett-Packard Italiana S.p.A.  
Via Nuova San Rocco A  
Capadimonte, 62A  
80131 Napoli  
Tel: (081) 710998  
Hewlett-Packard Italiana S.p.A.  
Via Martin Luther King, 38/11  
I-40132 Bologna  
Tel: (051) 402394  
Telex: 511630  
**JAPAN**  
Yokogawa-Hewlett-Packard  
Ltd.  
29-21, Takaido-Higashi  
3-chome  
Suginami-ku, Tokyo 168  
Tel: 03-331-6111  
Telex: 232-2024 YHP-Tokyo  
Yokogawa-Hewlett-Packard  
Ltd.  
Chuo Bldg., 4th Floor  
4-20, Nishinakajima 5-chome  
Yodogawa-ku, Osaka-shi  
**Osaka**, 532  
Tel: 06-304-6021  
Telex: 523-3624  
Yokogawa-Hewlett-Packard  
Ltd.  
Sunilomo Seimei Nagaya Bldg.  
11-2 Shimosajima-cho,  
Nakamura-ku, Nagoya, 450  
Tel: 052-571-5170  
Yokogawa-Hewlett-Packard  
Ltd.  
Tanigawa Building  
2-24-1 Tsuruya-cho  
**Yokohama**, 221  
Tel: 045-312-1252  
Telex: 382-3204 YHP YOK

**MOZAMBIQUE**  
A.N. Goncalves, Ltd.  
162, 1° Apt. 14 Av. D. Luis  
Caixa Postal 107  
**Maputo**  
Tel: 27091, 27114  
Telex: 6-203 NEGON Mo  
**NETHERLANDS**  
Hewlett-Packard Benelux N.V.  
Van Heuven Goedhartlaan 121  
P.O. Box 667  
1181KK Amstelveen  
Tel: (20) 47 20 21  
Telex: 13 216  
**NEW ZEALAND**  
Hewlett-Packard (N.Z.) Ltd.  
4-12 Cruickshank Street  
Kilbirnie, Wellington 3  
P.O. Box 9443  
Courtney Place  
**Wellington**  
Tel: 877-199  
Hewlett-Packard (N.Z.) Ltd.  
P.O. Box 26-189  
169 Manukau Road  
Epsom, Auckland  
Tel: 687-159  
Analytical/Medical Only  
Northrup Instruments &  
Systems Ltd.,  
Sturdee House  
85-87 Ghuznee Street  
P.O. Box 2406  
**Wellington**  
Tel: 850-091  
Telex: NZ 31291  
Northrup Instruments &  
Systems Ltd.  
Eden House, 44 Khyber Pass  
Rd.  
P.O. Box 9682, Newmarket  
**Auckland** 1  
Tel: 794-091  
Northrup Instruments &  
Systems Ltd.  
Terrace House, 4 Oxford  
Terrace  
P.O. Box 8388  
**Christchurch**  
Tel: 64-165  
**NIGERIA**  
The Electronics  
Instruments Ltd.  
N6B/770 Oyo Road  
Oluseun House  
P.M.B. 5402  
**Ibadan**  
Tel: 461577  
Telex: 31231 TEIL NG  
The Electronics  
Instruments Ltd.  
144 Agege Motor Road, Mushin  
P.O. Box 481  
Mushin, Lagos  
**NORWAY**  
Hewlett-Packard Norge A/S  
Ostendalen 18  
P.O. Box 34  
1345 Osteras  
Tel: (02) 1711 80  
Telex: 16621 hpnas n  
Hewlett-Packard Norge A/S  
Nygaardsgaten 114  
P.O. Box 4210  
5013 Nygaardsgaten,  
**Bergen**  
Tel: (05) 21 97 33  
**PANAMA**  
Electrónica Balboa, S.A.  
Aparatado 4929  
Panama 5  
Calle Samuel Lewis  
Edificio "Alfa," No. 2  
**Ciudad de Panama**  
Tel: 64-2700  
Telex: 3483103 Curundu,  
Canal Zone  
**PERU**  
Compañía Electro Médica S.A.  
Los Flamencos 145  
San Isidro Casilla 1030  
**Lima** 1  
Tel: 41-4325  
Telex: Pub. Booth 25424  
SISIDRO  
**PAKISTAN**  
Mushko & Company Ltd.  
Osman Chambers  
Adehla Haroon Road  
**Karachi**-3  
Tel: 511027, 512927  
Telex: 2894

**PORTUGAL**  
Hewlett-Packard do Brasil  
I.E.C. Ltda.  
Alameda Rio Negro, 750  
Alphaville  
06400 Barueri SP  
Tel: 429-3222  
Hewlett-Packard do Brasil  
I.E.C. Ltda.  
Rua Padre Chagas, 32  
90000-Pôrto Alegre-RS  
Tel: 22-2998, 22-5621  
Hewlett-Packard do Brasil  
I.E.C. Ltda.  
Av. Epitacio Pessoa, 4664  
22471-Rio de Janeiro-RJ  
Tel: 286-0237  
Telex: 021-21905 HPBR-BR

**ROMANIA**  
Hewlett-Packard France  
18, rue du Canal de la Marne  
67300 Schiltigheim  
Tel: (88) 83 08 10  
Telex: 890141F  
Hewlett-Packard France  
Immeuble pénière  
rue van Gogh  
59650 Villeneuve D'Ascq  
Tel: (20) 91 41 25  
Telex: 160124F  
Hewlett-Packard France  
Bâtiment Ampère  
Rue de la Commune de Paris  
B.P. 300  
93153 Le Blanc Mesnil-  
Cédex  
Tel: (01) 931 88 50  
Telex: 211032F  
Hewlett-Packard France  
Av. du Pdt. Kennedy  
33700 Marignac  
Tel: (56) 97 01 81  
Hewlett-Packard France  
Immeuble Lorraine  
Boulevard de France  
91035 Evry-Cédex  
Tel: 077 96 60  
Telex: 692315F  
Hewlett-Packard France  
23 Rue Lothaire  
57000 Metz  
Tel: (87) 65 53 50  
Telex: 011-3751

**RUSSIA**  
Hewlett-Packard France  
18, rue du Canal de la Marne  
67300 Schiltigheim  
Tel: (88) 83 08 10  
Telex: 890141F  
Hewlett-Packard France  
Immeuble pénière  
rue van Gogh  
59650 Villeneuve D'Ascq  
Tel: (20) 91 41 25  
Telex: 160124F  
Hewlett-Packard France  
Bâtiment Ampère  
Rue de la Commune de Paris  
B.P. 300  
93153 Le Blanc Mesnil-  
Cédex  
Tel: (01) 931 88 50  
Telex: 211032F  
Hewlett-Packard France  
Av. du Pdt. Kennedy  
33700 Marignac  
Tel: (56) 97 01 81  
Hewlett-Packard France  
Immeuble Lorraine  
Boulevard de France  
91035 Evry-Cédex  
Tel: 077 96 60  
Telex: 692315F  
Hewlett-Packard France  
23 Rue Lothaire  
57000 Metz  
Tel: (87) 65 53 50  
Telex: 011-3751

**SINGAPORE**  
Hewlett-Packard France  
18, rue du Canal de la Marne  
67300 Schiltigheim  
Tel: (88) 83 08 10  
Telex: 890141F  
Hewlett-Packard France  
Immeuble pénière  
rue van Gogh  
59650 Villeneuve D'Ascq  
Tel: (20) 91 41 25  
Telex: 160124F  
Hewlett-Packard France  
Bâtiment Ampère  
Rue de la Commune de Paris  
B.P. 300  
93153 Le Blanc Mesnil-  
Cédex  
Tel: (01) 931 88 50  
Telex: 211032F  
Hewlett-Packard France  
Av. du Pdt. Kennedy  
33700 Marignac  
Tel: (56) 97 01 81  
Hewlett-Packard France  
Immeuble Lorraine  
Boulevard de France  
91035 Evry-Cédex  
Tel: 077 96 60  
Telex: 692315F  
Hewlett-Packard France  
23 Rue Lothaire  
57000 Metz  
Tel: (87) 65 53 50  
Telex: 011-3751

**SOUTH AFRICA**  
Hewlett-Packard France  
18, rue du Canal de la Marne  
67300 Schiltigheim  
Tel: (88) 83 08 10  
Telex: 890141F  
Hewlett-Packard France  
Immeuble pénière  
rue van Gogh  
59650 Villeneuve D'Ascq  
Tel: (20) 91 41 25  
Telex: 160124F  
Hewlett-Packard France  
Bâtiment Ampère  
Rue de la Commune de Paris  
B.P. 300  
93153 Le Blanc Mesnil-  
Cédex  
Tel: (01) 931 88 50  
Telex: 211032F  
Hewlett-Packard France  
Av. du Pdt. Kennedy  
33700 Marignac  
Tel: (56) 97 01 81  
Hewlett-Packard France  
Immeuble Lorraine  
Boulevard de France  
91035 Evry-Cédex  
Tel: 077 96 60  
Telex: 692315F  
Hewlett-Packard France  
23 Rue Lothaire  
57000 Metz  
Tel: (87) 65 53 50  
Telex: 011-3751

**SPAIN**  
Hewlett-Packard France  
18, rue du Canal de la Marne  
67300 Schiltigheim  
Tel: (88) 83 08 10  
Telex: 890141F  
Hewlett-Packard France  
Immeuble pénière  
rue van Gogh  
59650 Villeneuve D'Ascq  
Tel: (20) 91 41 25  
Telex: 160124F  
Hewlett-Packard France  
Bâtiment Ampère  
Rue de la Commune de Paris  
B.P. 300  
93153 Le Blanc Mesnil-  
Cédex  
Tel: (01) 931 88 50  
Telex: 211032F  
Hewlett-Packard France  
Av. du Pdt. Kennedy  
33700 Marignac  
Tel: (56) 97 01 81  
Hewlett-Packard France  
Immeuble Lorraine  
Boulevard de France  
91035 Evry-Cédex  
Tel: 077 96 60  
Telex: 692315F  
Hewlett-Packard France  
23 Rue Lothaire  
57000 Metz  
Tel: (87) 65 53 50  
Telex: 011-3751

**SWEDEN**  
Hewlett-Packard France  
18, rue du Canal de la Marne  
67300 Schiltigheim  
Tel: (88) 83 08 10  
Telex: 890141F  
Hewlett-Packard France  
Immeuble pénière  
rue van Gogh  
59650 Villeneuve D'Ascq  
Tel: (20) 91 41 25  
Telex: 160124F  
Hewlett-Packard France  
Bâtiment Ampère  
Rue de la Commune de Paris  
B.P. 300  
93153 Le Blanc Mesnil-  
Cédex  
Tel: (01) 931 88 50  
Telex: 211032F  
Hewlett-Packard France  
Av. du Pdt. Kennedy  
33700 Marignac  
Tel: (56) 97 01 81  
Hewlett-Packard France  
Immeuble Lorraine  
Boulevard de France  
91035 Evry-Cédex  
Tel: 077 96 60  
Telex: 692315F  
Hewlett-Packard France  
23 Rue Lothaire  
57000 Metz  
Tel: (87) 65 53 50  
Telex: 011-3751

**SWITZERLAND**  
Hewlett-Packard France  
18, rue du Canal de la Marne  
67300 Schiltigheim  
Tel: (88) 83 08 10  
Telex: 890141F  
Hewlett-Packard France  
Immeuble pénière  
rue van Gogh  
59650 Villeneuve D'Ascq  
Tel: (20) 91 41 25  
Telex: 160124F  
Hewlett-Packard France  
Bâtiment Ampère  
Rue de la Commune de Paris  
B.P. 300  
93153 Le Blanc Mesnil-  
Cédex  
Tel: (01) 931 88 50  
Telex: 211032F  
Hewlett-Packard France  
Av. du Pdt. Kennedy  
33700 Marignac  
Tel: (56) 97 01 81  
Hewlett-Packard France  
Immeuble Lorraine  
Boulevard de France  
91035 Evry-Cédex  
Tel: 077 96 60  
Telex: 692315F  
Hewlett-Packard France  
23 Rue Lothaire  
57000 Metz  
Tel: (87) 65 53 50  
Telex: 011-3751

**TAIWAN**  
Hewlett-Packard France  
18, rue du Canal de la Marne  
67300 Schiltigheim  
Tel: (88) 83 08 10  
Telex: 890141F  
Hewlett-Packard France  
Immeuble pénière  
rue van Gogh  
59650 Villeneuve D'Ascq  
Tel: (20) 91 41 25  
Telex: 160124F  
Hewlett-Packard France  
Bâtiment Ampère  
Rue de la Commune de Paris  
B.P. 300  
93153 Le Blanc Mesnil-  
Cédex  
Tel: (01) 931 88 50  
Telex: 211032F  
Hewlett-Packard France  
Av. du Pdt. Kennedy  
33700 Marignac  
Tel: (56) 97 01 81  
Hewlett-Packard France  
Immeuble Lorraine  
Boulevard de France  
91035 Evry-Cédex  
Tel: 077 96 60  
Telex: 692315F  
Hewlett-Packard France  
23 Rue Lothaire  
57000 Metz  
Tel: (87) 65 53 50  
Telex: 011-3751

**THAILAND**  
Hewlett-Packard France  
18, rue du Canal de la Marne  
67300 Schiltigheim  
Tel:





# SALES OFFICES

Arranged alphabetically by country (cont.)

hko & Company, Ltd.  
Bazar Rd.  
for G-6/4  
mabad  
28264

**PHILIPPINES**  
Online Advanced Systems  
Operation  
House  
orsolo cor. Herrera Str.  
aspi Village, Makati  
Box 1510  
ro Manila  
85-35-81, 85-34-91,  
32-21  
ex: 3274 ONLINE

**ODESIA**  
d Technical Sales  
Kelvin Road North  
Box 3458  
Isabury  
705231 (5 lines)  
ex: RH 4122

**LAND**  
ro Informacji Technicznej  
Hewlett-Packard  
Slawski 2, 6P  
00-950 Warszawa  
39 59 62, 39 51 87  
ex: 81 24 53

**PORTUGAL**  
Electra-Empresa Técnica de  
Equipamentos Eléctricos  
S.A.R.L.  
Rodrigo da Fonseca 103  
Box 2531  
Isabon 1  
(19) 68 60 72  
ex: 12598

ical Only  
ndiner  
ercambio Mundial de  
Comercio S.a.r.l.  
Box 2761  
enida Antonio Augusto  
Aguiar 138  
Isabon 1  
(19) 53 21 31/7  
ex: 16691 munter p

**ERTO RICO**  
Hewlett-Packard Inter-  
Americas  
erto Rico Branch Office  
ile 272,  
03 Urb. Country Club  
arolina 00630  
(809) 762-7255  
ex: 345 0514

**ATAR**  
sser Trading & Contracting  
Box 1563  
oha  
i: 22170  
ex: 4439 NASSER

**OMANIA**  
Hewlett-Packard  
Reprezentanta  
n. Balcescu 16  
Iscuresti  
i: 15 100 23 88 85  
ex: 10340

**AUDI ARABIA**  
Modern Electronic  
Establishment (Head Office)  
Box 1228, Baghdadiah  
Street  
ddah  
i: 27 798  
ex: 40035

able: ELECTA JEDDAH  
Modern Electronic  
Establishment (Branch)  
Box 2728  
iyadh  
i: 62596/66232  
ex: 202049

Modern Electronic  
Establishment (Branch)  
Box 193  
-Khorbar  
i: 44678-44813  
ex: 670136

able: ELECTA AL-KHOBAR  
Singapore  
(Pie) Ltd.  
Floor, Inchcape House  
50-452 Alexandra Road  
Box 58  
exandra Post Office  
Singapore 9115  
i: 631788  
ex: HPSG RS 21486

**SOUTH AFRICA**  
Hewlett-Packard South Africa  
(Pty.), Ltd.  
Private Bag Wendywood,  
Sandton, Transvaal, 2144  
Hewlett-Packard Centre  
Daphne Street, Wendywood,  
Sandton, 2144  
Tel: 802-5111/25  
Telex: 8-4782

Hewlett-Packard South Africa  
(Pty.), Ltd.  
P.O. Box 120  
Howard Place,  
Cape Province, 7450  
Pine Park Centre, Forest Drive,  
Pinelands,  
Cape Province, 7405  
Tel: 53-7955 thru 9  
Telex: 57-0006

**SPAIN**  
Hewlett-Packard Española,  
S.A.  
Calle Jerez 3  
E-Madrid 16  
Tel: (1) 458 26 00 (10 lines)  
Telex: 23515 hpe

Hewlett-Packard Española S.A.  
Colonia Mirasierra  
Edificio Juban  
c/o Costa Brava, 13  
Madrid 34  
Hewlett-Packard Española,  
S.A.  
Milaneseo 21-23  
E-Barcelona 17  
Tel: (3) 203 6200 (5 lines)  
Telex: 52603 hpe e

Hewlett-Packard Española S.A.  
Edificio Albia 17 B  
E-Bilbao 1  
Tel: 23 83 06/23 82 06  
Hewlett-Packard Española S.A.  
C/Ramón Gordillo 1  
(Enlo.)  
E-Valencia 10  
Tel: 96-361.13.54/361.13.58

**SRI LANKA**  
Metropolitan Agencies Ltd.  
209/9 Union Place  
Colombo 2  
Tel: 35947  
Telex: 1377METROLD CE

**SWEDEN**  
Hewlett-Packard Sverige AB  
Enighetsvägen 3, Fack  
S-161 Bromma 20  
Tel: (08) 730 05 50  
Telex: 10721  
Cable: MEASUREMENTS  
Stockholm  
Hewlett-Packard Sverige AB  
Fröstaligatan 30  
S-421 32 Västra  
Frölunda  
Tel: (031) 49 09 50  
Telex: 10721 via Bromma  
office

**SWITZERLAND**  
Hewlett-Packard (Schweiz) AG  
Zürcherstrasse 20  
P.O. Box 307  
CH-8952 Schlieren-  
Zürich  
Tel: (01) 7305240  
Telex: 53933 hpag ch  
Cable: HPAG CH  
Hewlett-Packard (Schweiz) AG  
Château Bloc 19  
CH-1219 Le Lignon-  
Geneva  
Tel: (022) 96 03 22  
Telex: 27333 hpag ch  
Cable: HEWPAKCA Geneva

**SYRIA**  
General Electronic Inc.  
Nuri Basha-Ahmal Ebn Kays  
Street  
P.O. Box 5781  
Damascus  
Tel: 33 24 87  
Telex: 11215 ITKAL  
Cable: ELECTROBOR  
DAMASCUS

Medical only  
Sawah & Co.  
Place Azm  
B.P. 2308  
Damascus  
Tel: 16 367-19 697-14 268  
Telex: 11304 SATACO SY  
Cable: SAWAH, DAMASCUS

Suleiman Hilal El Mawi  
P.O. Box 2528  
Mamoun Bilal Street, 56-58  
Damascus  
Tel: 11 46 63  
Telex: 11270  
Cable: HILAL DAMASCUS

**TAIWAN**  
Hewlett-Packard Far East Ltd.  
Taiwan Branch  
Bank Tower, 5th Floor  
205 Tun Hau North Road  
Taipei  
Tel: (02) 751-0404 (15 lines)  
Hewlett-Packard Far East Ltd.  
Taiwan Branch  
68-2, Chung Cheng 3rd. Road  
Kaohsiung  
Tel: (07) 242318-Kaohsiung  
Telex: 339 105

Hewlett-Packard Ltd.  
Lyon Court  
Hereward Rise  
Dudley Road  
Halesowen,  
West Midlands, B62 8SD  
GB-England  
Tel: (021) 501 1221  
Telex: 339 105

Hewlett-Packard Ltd.  
Wedge House  
799, London Road  
Thornton Heath  
Surrey, CR4 6XL  
GB-England  
Tel: (01) 684-0103/8  
Telex: 946825

Hewlett-Packard Ltd.  
14 Wesley St  
Castleford  
Yorks WF10 1AE  
Tel: (0977) 550016  
Telex: 555735

**Dar es Salaam**  
Tel: 21251 Ext. 265  
Telex: 41030  
Hewlett-Packard Ltd.  
Tradax House  
St. Mary's Walk  
Maldenhead  
Berkshire, SL6 1ST  
GB-England  
Tel: (0331) 331 1188  
Telex: 72682

**TANZANIA**  
Medical Only  
International Aeradio (E.A.), Ltd.  
P.O. Box 861  
Dar es Salaam  
Tel: 21251 Ext. 265  
Telex: 41030

**THAILAND**  
UNIMESA Co. Ltd.  
Elcom Research Building  
2538 Sukumvit Ave.  
Bangchak, Bangkok  
Tel: 39-32-387, 39-30-338  
Tel: 35947  
Telex: 1377METROLD CE

**TRINIDAD & TOBAGO**  
CARTEL  
Caribbean Telecoms Ltd.  
P.O. Box 732  
69 Frederick Street  
Port-of-Spain  
Tel: 62-53068

**TUNISIA**  
Tunisie Electronique  
31 Avenue de la Liberte  
Tunis  
Tel: 280 144  
Corema  
1 ter. Av. de Carthage  
Tunis  
Tel: 253 821  
Telex: 12319 CABAM TN

**TURKEY**  
TEKMIN Company Ltd.  
Riza Sah Pehlivi  
Caddesi No. 7  
Kavaklıdere, Ankara  
Tel: 275800  
Telex: 42155  
Teknim Com., Ltd.  
Barbaros Bulvarı 55/12  
Besikyas, Istanbul  
Tel: 613 546  
Telex: 23540

**UNITED ARAB EMIRATES**  
Emilat Ltd. (Head Office)  
P.O. Box 1641  
Sharjah  
Tel: 354121/3  
Telex: 8136

Emilat Ltd. (Branch Office)  
P.O. Box 2711  
Abu Dhabi  
Tel: 331370/1

**UNITED KINGDOM**  
Hewlett-Packard Ltd.  
King Street Lane  
Winnersh, Wokingham  
Berkshire RG11 5AR  
GB-England  
Tel: (0734) 784774  
Telex: 84 71 78/9

Hewlett-Packard Ltd.  
Fournier House,  
257-263 High Street  
London Colney  
St. Albans, Herts  
GB-England  
Tel: (0727) 24400  
Telex: 1-8952716

Hewlett-Packard Ltd.  
Trafalgar House  
Navigation Road  
Aldricham  
Cheshire WA14 1NU  
GB-England  
Tel: (061) 928 6422  
Telex: 668068

Hewlett-Packard Ltd.  
Lyon Court  
Hereward Rise  
Dudley Road  
Halesowen,  
West Midlands, B62 8SD  
GB-England  
Tel: (021) 501 1221  
Telex: 339 105

Hewlett-Packard Ltd.  
Wedge House  
799, London Road  
Thornton Heath  
Surrey, CR4 6XL  
GB-England  
Tel: (01) 684-0103/8  
Telex: 946825

Hewlett-Packard Ltd.  
14 Wesley St  
Castleford  
Yorks WF10 1AE  
Tel: (0977) 550016  
Telex: 555735

**UNITED STATES**  
**ALABAMA**  
700 Century Park South,  
Suite 128  
Birmingham 35226  
Tel: (205) 822-6802

P.O. Box 4207  
8290 Whitesburg Dr.  
Huntsville 35802  
Tel: (205) 881-4591

**ARIZONA**  
2336 E. Magnolia St.  
Phoenix 85034  
Tel: (602) 273-8000  
2424 East Aragon Rd.  
Tucson 85706  
Tel: (602) 273-8000

**ARKANSAS**  
Medical Service Only  
P.O. Box 5846  
Brady Station  
Little Rock 72215  
Tel: (501) 376-1844

**CALIFORNIA**  
1579 W. Shaw Ave.  
Fresno 93711  
Tel: (209) 224-0582  
1430 East Orangefhorpe Ave.  
Fullerton 92631  
Tel: (714) 870-1000

5400 West Rosecrans Blvd.  
P.O. Box 92105  
World Way Postal Center  
Los Angeles 90009  
Tel: (213) 970-7500  
TWX: 910-325-6608

3939 Lankershim Boulevard  
North Hollywood 91604  
Tel: (213) 877-1282  
TWX: 910-499-2671

3200 Hillview Ave.  
Palo Alto, CA 94304  
Tel: (408) 958-7000  
646 W. North Market Blvd.  
Sacramento 95834  
Tel: (916) 929-7222

9606 Aero Drive  
P.O. Box 23333  
San Diego 92123  
Tel: (714) 279-3200  
363 Brookhollow Dr.  
Santa Ana, CA 92705  
Tel: (714) 641-0977

3003 Scott Boulevard  
Santa Clara 95050  
Tel: (408) 988-7000  
TWX: 910-338-0518

454 Carlton Court  
So. San Francisco 94080  
Tel: (415) 877-0772

**Tarzana**  
Tel: (213) 705-3344

**COLORADO**  
5600 DTC Parkway  
Englewood 80110  
Tel: (303) 771-3455

**CONNECTICUT**  
47 Barnes Industrial Road  
Barnes Park South  
Wallingford 06492  
Tel: (203) 265-7801

**FLORIDA**  
P.O. Box 24210  
2727 N.W. 62nd Street  
Ft. Lauderdale 33309  
Tel: (305) 973-2600

4080 Woodcock Drive #132  
Brownett Building  
Jacksonville 32207  
Tel: (904) 398-0663

P.O. Box 13910  
6177 Lake Ellenor Dr.  
Orlando 32809  
Tel: (305) 859-2900

P.O. Box 12826  
Suite 5, Bldg. 1  
Office Park North  
Pensacola 32575  
Tel: (904) 476-8422

110 South Hoover Blvd.  
Suite 120  
Tampa 33609  
Tel: (813) 872-0900

**GEORGIA**  
P.O. Box 105005  
450 Interstate North Parkway  
Atlanta 30348  
Tel: (404) 955-1500  
TWX: 810-766-4890

Medical Service Only  
Tel: (404) 736-0592

P.O. Box 2103  
1172 N. Davis Drive  
Warner Robins 31098  
Tel: (912) 922-0449

**HAWAII**  
2875 So. King Street  
Honolulu 96826  
Tel: (808) 955-4455

**ILLINOIS**  
211 Prospect Rd.  
Bloomington 61701  
Tel: (309) 663-0383

5201 Tolliver Dr.  
Rolling Meadows 60008  
Tel: (312) 255-9800  
TWX: 910-687-2260

**MARYLAND**  
7121 Standard Drive  
Parkway Industrial Center  
Hanover 21076  
Tel: (301) 796-7700  
TWX: 710-862-1943

2 Choke Cherry Road  
Rockville 20850  
Tel: (301) 948-6370  
TWX: 710-828-9684

**MASSACHUSETTS**  
32 Hartwell Ave.  
Lexington 02173  
Tel: (617) 861-8960  
TWX: 710-326-6904

**MICHIGAN**  
23855 Research Drive  
Farmington Hills 48024  
Tel: (313) 476-6400

724 West Centre Ave.  
Kalamazoo 49002  
Tel: (616) 323-8362

**MINNESOTA**  
2400 N. Prior Ave.  
St. Paul 55113  
Tel: (612) 636-0700

**MISSISSIPPI**  
322 N. Main Plaza  
Jackson 39206  
Tel: (601) 982-9363

**MISSOURI**  
11131 Colorado Ave.  
Kansas City 64137  
Tel: (816) 763-8000  
TWX: 910-771-2087

1024 Executive Parkway  
St. Louis 63141  
Tel: (314) 878-0200

**NEBRASKA**  
Medical Only  
7101 Mercy Road  
Suite 101  
Omaha 68106  
Tel: (402) 392-0948

**NEVADA**  
**Las Vegas**  
Tel: (702) 736-6610

**NEW JERSEY**  
Crystal Brook Professional  
Building  
Route 35  
Eatontown 07724  
Tel: (201) 542-1384

W. 120 Century Rd.  
Paramus 07652  
Tel: (201) 265-5000  
TWX: 710-990-4951

**NEW MEXICO**  
P.O. Box 11634  
Station E  
11300 Lomas Blvd., N.E.  
Albuquerque 87123  
Tel: (505) 292-1330  
TWX: 910-989-1185

156 Wyatt Drive  
Las Cruces 88001  
Tel: (505) 526-2484  
TWX: 910-983-0550

**NEW YORK**  
6 Automation Lane  
Computer Park  
Albany 12205  
Tel: (518) 458-1550  
TWX: 710-444-4961

650 Perinton Hill Office Park  
Fairport 14450  
Tel: (716) 223-9950  
TWX: 510-253-0092

No. 1 Pennsylvania Plaza  
55th Floor  
34th Street & 8th Avenue  
New York 10001  
Tel: (212) 971-0800

5858 East Molloy Road  
Syracuse 13211  
Tel: (315) 455-2486

1 Crossways Park West  
Woodbury 11797  
Tel: (516) 921-0300  
TWX: 510-221-2183

**NORTH CAROLINA**  
5605 Roanne Way  
Greensboro 27409  
Tel: (919) 852-1800

**OHIO**  
Medical/Computer Only  
9920 Carver Road  
Cincinnati 45242  
Tel: (513) 891-9870

16500 Sprague Road  
Cleveland 44130  
Tel: (216) 243-7300  
TWX: 810-423-9430

962 Crupper Ave.  
Columbus 43229  
Tel: (614) 436-1041

330 Progress Rd.  
Dayton 45449  
Tel: (513) 859-8202

**OKLAHOMA**  
P.O. Box 32008  
6301 N. Meridian Avenue  
Oklahoma City 73112  
Tel: (405) 721-0200

9920 E. 42nd Street  
Suite 121  
Tulsa 74145  
Tel: (918) 665-3300

**OREGON**  
17890 S.W. Lower Boones  
Ferry Road  
Tualatin 97062  
Tel: (503) 620-3350

**PENNSYLVANIA**  
1021 8th Avenue  
King of Prussia Industrial Park  
King of Prussia 19406  
Tel: (215) 265-7000  
TWX: 510-660-2670

111 Zeta Drive  
Pittsburgh 15238  
Tel: (412) 782-0400

**SOUTH CAROLINA**  
P.O. Box 6442  
6941-0 N. Trenholm Road  
Columbia 29206  
Tel: (803) 782-6493

**TENNESSEE**  
8906 Kingston Pike  
Knoxville 37919  
Tel: (615) 691-2371

3070 Directors Row  
Directors Square  
Memphis 38131  
Tel: (901) 346-8370

**TEXAS**  
4171 North Mesa  
Suite C110  
El Paso 79902  
Tel: (915) 533-3555

P.O. Box 42816  
10535 Harwin St.  
Houston 77036  
Tel: (713) 776-6400

**UTAH**  
2160 South 3270 West Street  
Salt Lake City 84119  
Tel: (801) 972-4711

**VIRGINIA**  
P.O. Box 9669  
2914 Hungary Spring Road  
Richmond 23228  
Tel: (804) 285-3431

Computer Systems/Medical  
Only  
Airport Executive Center  
Suite 302  
5700 Thurston Avenue  
Virginia Beach 23455  
Tel: (804) 460-2471

**WASHINGTON**  
Belleville Office Pk.  
2203 - 114th Ave. S.E.  
Bellevue 98004  
Tel: (206) 454-3971  
TWX: 910-443-2446

P.O. Box 4010  
Spokane 99202  
Tel: (509) 535-0864

**WEST VIRGINIA**  
Medical/Analytical Only  
4604 Mac Corkle Ave., S.E.  
Charleston 25304  
Tel: (304) 925-0492

**WISCONSIN**  
150 South Sunny Slope Road  
Brookfield 53005  
Tel: (414) 784-8800

**FOR U.S. AREAS**  
NOT LISTED:  
Contact the regional office  
nearest you:  
Atlanta, Georgia... North  
Hollywood, California...  
Rockville, Maryland...  
Rolling Meadows, Illinois.  
Their complete addresses  
are listed above.

**USSR**  
Hewlett-Packard  
Representative Office  
USSR  
Pokrovsky Boulevard  
4/17-kw 12  
Moscow 101000  
Tel: 294.20.24  
Telex: 7825 hewpak su

**YUGOSLAVIA**  
Iskra Commerce, n.s.o.l.  
Zastopstvo Hewlett-Packard  
Obilice Venac 26  
YU 11000 Beograd  
Tel: 636-955  
Telex: 11530

Iskra Commerce, n.s.o.l.  
Zastopstvo Hewlett-Packard  
Miklosiceva 38/vII  
YU-61000 Ljubljana  
Tel: 321-674, 315-879  
Telex: 31583

**URUGUAY**  
Pablo Ferrando S.A.Cel.  
Avenida Italia 2877  
Casilla de Correo 370  
Montevideo  
Tel: 40-3102  
Telex: 702 Public Booth  
Para Pablo Ferrando

**VENEZUELA**  
Hewlett-Packard de Venezuela  
C.A.  
P.O. Box 50933  
Caracas 105  
Los Rices Norte  
3a Transversal  
Edificio Segre  
Caracas 107  
Tel: 239-4133 (20 lines)  
Telex: 25146 HEWPAK

**ZAMBIA**  
R.J. Tibury (Zambia) Ltd.  
P.O. Box 2792  
Lusaka  
Tel: 73793

**MEDITERRANEAN AND MIDDLE EAST COUNTRIES NOT SHOWN, PLEASE CONTACT:**  
Hewlett-Packard S.A.  
Mediterranean and Middle East  
Operations  
35, Kolokotroni Street  
Platia Kefallariou  
GR-Kifissia-Athens, Greece  
Tel: 8080359/429  
Telex: 21-6588  
Cable: HEWPAKSA Athens

**SOCIALIST COUNTRIES NOT SHOWN, PLEASE CONTACT:**  
Hewlett-Packard Ges.m.b.H.  
Handelskai 52  
P.O. Box 7  
A-1205 Vienna, Austria  
Tel: (0222) 35 16 21 to 27  
Cable: HEWPAK Vienna  
Telex: 75923 hewpak a

**OTHER AREAS NOT LISTED, CONTACT:**  
Hewlett-Packard  
Intercontinental  
3495 Deer Creek Road  
Palo Alto, California 94304  
Tel: (415) 856-1501  
TWX: 910-373-1267  
Cable: HEWPAKSA Palo Alto  
Telex: 034-8300, 034-8493

Hewlett-Packard S.A.  
7, rue du Bois-du-Lan  
P.O. Box  
CH-1217 Meyrin 2 - Geneva  
Switzerland  
Tel: (022) 82 70 00  
Cable: HEWPAKSA Geneva  
Telex: 2 24 86







HEWLETT  
PACKARD